

Copyright © 2008-2013 Adapteva Inc.

All rights reserved.

Adapteva, the Adapteva Logo, EpiphanyTM, eSDKTM eCoreTM, eMeshTM, eLinkTM, eHostTM, eHalTM, and eLibTM are trademarks of Adapteva Inc. All other products or services mentioned herein may be trademarks of their respective owners.

The product described in this document is subject to continuous developments and improvements. All particulars of the product and its use contained in this document are given by Adapteva Inc. in good faith. For brevity purposes, Adapteva is used in place of Adapteva Inc. in below statements.

1. Subject to the provisions set out below, Adapteva hereby grants to you a perpetual, nonexclusive, nontransferable, royalty free, worldwide license to use this Reference Manual for the purposes of developing; (i) software applications or operating systems which are targeted to run on microprocessor chips and/or cores distributed under license from Adapteva; (ii) tools which are designed to develop software programs which are targeted to run on microprocessor cores distributed under license from Adapteva; (iii) or having developed integrated circuits which incorporate a microprocessor core manufactured under license from Adapteva.

2. Except as expressly licensed in Clause 1 you acquire no right, title or interest in the Reference Manual, or any Intellectual Property therein. In no event shall the licenses granted in Clause 1, be construed as granting you expressly or by implication, estoppel or otherwise, licenses to any Adapteva technology other than the Reference Manual. The license grant in Clause 1 expressly excludes any rights for you to use or take into use any Adapteva patents. No right is granted to you under the provisions of Clause 1 to; (i) use the Reference Manual for the purposes of developing or having developed microprocessor cores or models thereof which are compatible in whole or part with either or both the instructions or programmer's models described in this Reference Manual; or (ii) distribute in whole or in part this Reference Manual to third parties, other than to your subcontractors for the purposes of having developed products in accordance with the license grant in Clause 1 without the express written permission of Adapteva; or (iv) translate or have translated this Reference Manual into any other languages.

3.THE "REFERENCE MANUAL" IS PROVIDED "AS IS" WITH NO WARRANTIES EXPRESS, IMPLIED OR STATUTORY, INCLUDING BUT NOT LIMITED TO ANY WARRANTY OF SATISFACTORY QUALITY, NONINFRINGEMENT OR FITNESS FOR A PARTICULAR PURPOSE.

4. No license, express, implied or otherwise, is granted to LICENSEE, under the provisions of Clause 1, to use the Adapteva trade name, in connection with the use of the Reference Manual; or any products based thereon. Nothing in Clause 1 shall be construed as authority for you to make any representations on behalf of Adapteva in respect of the Reference Manual or any products based thereon.

Adapteva Inc. 1666 Massachusetts Ave, Suite 14 Lexington, MA 02420 USA

Table of Contents

1. Int	roduction	10
1.1	SDK Overview	10
1.2	Epiphany Memory Model	11
1.3	Epiphany Programming Framework	12
1.4	Epiphany SDK Directory Structure	13
1.5	ESDK Installation	14
1.6	Additional Documentation and Resources	15
2. Ep	iphany Multicore Development IDE (ECLIPSE)	16
2.1	Overview	17
2.2	Epiphany IDE tutorial	18
2.3	Online Eclipse Help for Common Tasks	27
2.4	Updating the Eclipse Installation	28
3. C/	C++ Compiler (E-GCC)	30
3.1	Overview	30
3.2	Simple Example	30
3.3	Compiler Command-line Options	31
3.4	GNU Function Attributes	37
3.5	Epiphany Specific Compiler Attributes	37
4. As	sembler (E-AS)	38
4.1	Overview	38
4.2	Simple Example	38
4.3	Command Line Options	38
4.4	General Syntax	38
4.5	Assembler Syntax Reference	41
5. Lir	nker (E-LD)	45
5.1	Overview	45
5.2	Simple Examples	45
5.3	Command Line Options	46
5.4	Linker Script Overview	47
5.5	Explicit Code and Data Memory Management	48
5.6	Memory Management Examples	50
6. EL	F Utilities	51
6.1	Overview	51
6.2	Utility Summary	51
7. Ins	struction Set Simulator (E-RUN)	52
7.1	Overview	52
7.2	Simple Example	52

7.3	Command Line Options	52
8. Har	dware Connection Server (E-SERVER)	53
8.1	Overview	53
8.2	Simple Example	54
8.3	Command Line Options	54
8.4	Target Server Connection API	55
9. Deb	bugger (E-GDB)	56
9.1	Overview	56
9.2	Simple Examples	57
9.3	Command Line Options	59
9.4	Quitting GDB	59
9.5	Shell I/O	60
9.6	Getting Help	60
9.7	Command Syntax	60
9.8	Command Summary	61
9.9	Epiphany GDB Limitations	64
10. E	piphany SDK Utilities (E-UTILS)	65
10.1	Overview	65
10.2	Reset Utility (E-RESET)	65
10.2	2.1 Example	65
10.3	Loader Utility (E-LOADER)	65
10.3	3.1 Command Line Options	66
10.3	3.2 Example	66
10.4	Memory Read Utility (E-READ)	67
10.4	4.1 Command Line Options	67
10.4	4.2 Example	68
10.5	Memory Write Utility (E-WRITE)	68
10.	5.1 Command Line Options	68
10.	5.2 Example	69
10.6	Hardware Revision Utility (E-HW-REV)	69
10.0	6.1 Example	69
11. S	andard Library Support	70
11.1	Overview	70
11.2	Standard C Libraries	70
11.3	Standard Math Library (math.h)	71
12. E	piphany System Programming Model	72
13. E	piphany Hardware Utility Library (eLib)	74
13.1	Overview	74

13.2 System Register Access Functions	
,	76
13.2.1 Overview	76
13.2.2 e_reg_read()	78
13.2.3 e_reg_write()	79
13.3 Interrupt Service Functions	80
13.3.1 Overview	80
13.3.2 e_irq_attach()	81
13.3.3 e_irq_global_mask()	82
13.3.4 e_irq_mask()	83
13.3.5 e_irq_set()	84
13.3.6 e_irq_clear()	85
13.4 Timer Functions	86
13.4.1 Overview	86
13.4.2 e_ctimer_get()	87
13.4.3 e_ctimer_set()	88
13.4.4 e_ctimer_start()	89
13.4.5 e_ctimer_stop()	90
13.4.6 e_wait()	92
13.5 DMA and Data Movement Functions	93
13.5.1 Overview	93
13.5.2 e_read()	95
13.5.3 e_write()	96
13.5.4 e_dma_copy()	97
13.5.5 e_dma_start()	98
13.5.6 e_dma_busy()	99
13.5.7 e_dma_wait()	00
13.5.8 e_dma_set _desc()10	01
13.6 Mutex and Barrier Functions10	02
13.6.1 Overview	02
13.6.2 e_mutex_init()	03
13.6.3 e_mutex_lock()	04
13.6.4 e_mutex_trylock()	05
13.6.5 e_mutex_unlock()	06
13.6.6 e_barrier_init()	07
13.6.7 e_barrier()10	80
13.7 Core ID and Workgroup Functions10	09
13.7.1 Overview	09
1372 e get coreid()	11

13.7.3	e_get_global_address ()	112
13.7.4	e_coreid_from_coords()	113
13.7.5	e_coords_from_coreid()	114
13.7.6	e_is_oncore()	115
13.7.7	e_neighbor_id()	116
14. Epiph	any Host Library (eHAL)	117
14.1 Ove	erview	117
14.2 Pla	tform Configuration Functions	121
14.2.1	Overview	121
14.2.2	e_init()	122
14.2.3	e_get_platform_info()	123
14.2.4	e_finalize()	124
14.3 Wo	rkgroup and External Memory Allocation Functions	125
14.3.1	Overview	125
14.3.2	e_open()	126
14.3.3	e_close()	127
14.3.4	e_alloc()	128
14.3.5	e_free()	129
14.4 Dat	a Transfer Functions	130
14.4.1	Overview	130
14.4.2	e_read()	131
14.4.3	e_write()	132
14.5 Sys	stem Control Functions	133
14.5.1	Overview	133
14.5.2	e_reset_system()	134
14.5.3	e_reset_group()	135
14.5.4	e_start()	136
14.5.5	e_start_group()	137
14.5.6	e_signal()	138
14.5.7	e_halt()	139
14.5.8	e_resume()	140
14.6 Pro	gram Load Functions	141
14.6.1	Overview	141
14.6.2	e_load()	142
14.6.3	e_load_group()	143
14.7 Util	ity Functions	144
14.7.1	Overview	144
14.7.2	e_get_num_from_coords()	145

14.7.3	e_get_coords_from_num()	146
14.7.4	e_is_addr_on_chip()	147
14.7.5	e_is_addr_on_group()	148
14.7.6	e_set_host_verbosity()	149
14.7.7	e_set_loader_verbosity()	150
Appendix A:	Application Binary Interface (EABI)	151
A.1 Ove	erview	151
A.2 Dat	a Types and Alignment Restrictions	152
A.2.1	Arithmetic Data Types	152
A.2.2	Composite Types	153
A.3 Pro	cedure Call Standard	154
A.3.1	Overview	154
A.3.2	Register Usage	154
A.3.3	Handling Large Data Types	155
A.3.4	Stack Management	155
A.3.5	Subroutine Calls	156
A.3.6	Procedure Result Return	156
A.3.7	Parameter Passing	157
Appendix B:	Board Support Packages	158
B.1 B	oard Support Package Descriptor File	158
Appendix C:	Changes from Previous Revisions	163

List of Figures

Figure 1.1: Epiphany SDK	10
Figure 1.2: Epiphany Global Address Map	11
Figure 1.3: Epiphany Program Build Flow	12
Figure 1.4: Epiphany SDK Directory Structure	13
Figure 2.1 The Eclipse IDE	17
Figure 2.2: The Workspace Launcher	18
Figure 2.3: Project Definition Selection	19
Figure 2.4: Application Target Cores Allocation	20
Figure 2.5: C/C++ Perspective for Multicore Application	21
Figure 2.6: Run Configurations Settings	23
Figure 2.7: Debug Configuration Settings	23
Figure 2.8: Debug Perspective	24
Figure 2.9: C/C++ Perspective for Single Core Application	26
Figure 2.10: Install New Software Dialog	28
Figure 8.1: The eServer Client-Target Connection Concept	53
Figure 12.1: Platform, Workgroup and eCore coordinates	73

List of Tables

Table 3.1: General Compiler Options	31
Table 3.2: Warning Options	32
Table 3.3: Debug Options	32
Table 3.4: Linker Options	32
Table 3.5: Optimization Options	33
Table 3.6: Floating Point Math Options	34
Table 3.7: Epiphany Unique Options	35
Table 4.1: Assembler Command Line Options	38
Table 4.2: Assembler Control Directives	41
Table 4.3: Assembler Symbol Directives	42
Table 4.4: Assembler Constant Directives	42
Table 4.5: Assembler Looping Directives	42
Table 4.6: Assembler Conditional Directives	43
Table 4.7: Assembler Macro Directives	43
Table 4.8: Assembler Digit Encoding	43
Table 4.9: Assembler Expression Operators	44
Table 5.1: Linker Command Line Options	46
Table 5.2: Memory Management Linker Symbols	48
Table 5.3: Memory Management Scenarios	49
Table 5.4: Linker Sections	49
Table 6.1 ELF Manipulation Programs	51
Table 7.1: Simulator Command Line Options	52
Table 8.1: eServer Command Line Options	54
Table 9.1: Debugger Command Line Options	59
Table 9.2: Debugger Commands	61
Table 10.1: Loader Command Line Options	66
Table 10.2: e-read Command Line Options	67
Table 10.3: e-write Command Line Options	68
Table 11.1: Key Standard C Library Components	70
Table 14.1: Arithmetic Data Types	152
Table 14.2: Register Usage and Procedure Call Standard	154

1. Introduction

1.1 SDK Overview

The Epiphany[™] architecture defines a multicore, scalable, shared-memory computing fabric. It consists of a 2D array of mesh compute nodes connected by a low-latency mesh network-onchip. The Epiphany Software Development Kit (eSDK) is a state-of-the art software development environment targeting the Epiphany multicore architecture. The eSDK is based on standard development tools including an optimizing C-compiler, functional simulator, debugger, and multicore integrated development environment (IDE). The eSDK enables out-of-the-box execution of applications written in regular ANSI-C and does not require any C-subset, language extensions, or SIMD style programming. The unparalleled energy efficiency of the Epiphany architecture and the ease of use and fine grain control of the eSDK offer developers best-in-class capabilities for the most demanding real-time applications. The Epiphany SDK framework is illustrated in Figure 1.1 and contains the following key components:

- Optimized ANSI-C compiler (based on gcc)
- Robust multicore Eclipse IDE (on selected platforms)
- Multicore debugger (based on gdb)
- Multicore communication and hardware utility libraries
- Fast functional simulator with instruction trace capability.



Figure 1.1: Epiphany SDK

1.2 Epiphany Memory Model

The Epiphany architecture uses a single, flat unprotected address space consisting of 2^{32} 8-bit bytes. Byte addresses are treated as unsigned numbers, running from 0 to 2^{32} –1. This address space is regarded as consisting of 2^{30} 32-bit words, each of whose addresses is word-aligned, which means that the address is divisible by 4. The word whose word-aligned address is A consists of the four bytes with addresses A, A+1, A+2 and A+3. Each mesh node has a local, aliased, range of local memory that is accessible by the mesh node itself starting at address 0x00 On 32KB chip models, it ends at address 0x00007FFF. Each mesh node also has a globally addressable ID that allows communication with all other mesh nodes in the system. The mesh-node ID consists of 6 row-ID bits and 6 column-ID bits situated at the upper most-significant bits (MSBs) of the address space. The complete memory is shown in Figure 1.2.





Data and code can be placed anywhere in the memory space or in external space, except for the memory-mapped register space and reserved space, but performance is optimized when the data and code are placed in separate local-memory banks.

1.3 Epiphany Programming Framework

Each one of the Epiphany processor nodes can run independent programs. Figure 1.3 shows the general programming flow for the Epiphany architecture, highlighting the independent build of programs running on different cores and the use of a common loader to load the complete multicore program onto the chip. The multicore IDE handles the detail of configuring and building multicore projects.



Figure 1.3: Epiphany Program Build Flow

1.4 Epiphany SDK Directory Structure

The Epiphany SDK framework was designed to support multiple platforms, possibly mix-andmatching development platform and deployment platform. Additionally, it is meant to support multiple revisions of the package. As such, a few key components are being referred to by symbolic links instead of their actual name. It is also relocatable across the filesystem, and the root directory discussed here is the default location. Figure 1.4 shows the directory structure of the installed Epiphany SDK.



Figure 1.4: Epiphany SDK Directory Structure

The eSDK framework contains these main components:

tools: The Epiphany GNU toolchain, Epiphany runtime libraries and the host-specific software.

bsps:	Board Support Packages, with per-platform specific files like default linker scripts	
	and platform definition files.	
docs:	eSDK documentation, including the eSDK reference and the Architecture	
	Reference.	
examples:	Some code examples for working with the software framework.	
e-eclipse:	On some platforms, a Epiphany port for the Eclipse IDE is provided.	

1.5 ESDK Installation

The eSDK is provided as a ready-to-install archive, downloadable from the Adapteva FTP site (<u>ftp.adapteva.com</u>, for registered customers) or from the Parallella FPT site (<u>ftp.parallella.org</u>, for Anonymous downloads). By default, the eSDK is installed at /opt/adapteva. Any other path can be set as well. After downloading the eSDK archive, extract the file in the /opt/adapteva directory (or other target directory) and create or update a symbolic link to the root of the eSDK release. You may need administrator privilege to use the following commands. Use "sudo" or equivalent as required. Following is the BASH command sequence:

```
$ REV="4.13.03.30" # replace with the current revision
$ EDIR="/opt/adapteva" # replace with preferred directory
$ ftp ... # get the eSDK archive tarball
$ mkdir -p ${EDIR} # create the root directory
$ tar xvf esdk.${REV}.tgz -C ${EDIR} # extract tarball
$ ln -sTf esdk.${REV} ${EDIR}/esdk # create a symlink to new eSDK
```

Next, library prerequisites have to be installed for the Epiphany compiler to work. On platforms supporting the Eclipse IDE, Java Run-Time library is required as well:

\$ apt-get install libmpfr-dev libgmp3-dev libmpc-dev openjdk-6-jre

If you use a 64-bit PC for cross-build host applications for a 32-bit embedded platform, you may need to install a 32-bit layer support:

```
$ apt-get install ia32-libs
```

In order to use the eSDK, some environment variables have to be defined. Adding the following commands to your shell's login script will define these automatically:

```
$ echo "EPIPHANY_HOME=${EDIR}/esdk" >> ~/.bashrc
$ echo '. ${EPIPHANY HOME}/setup.sh' >> ~/.bashrc
```

1.6 Additional Documentation and Resources

This reference manual provides a brief overview of the extensive features available in the GNU distributions and Eclipse IDE. The documentation provided should be enough to enable the successful use of the Epiphany platform for most use cases. Advanced users who are looking for additional features should review the complete manuals found at the following locations:

GCC Compiler: http://gcc.gnu.org/onlinedocs/gcc

LD Linker: http://sourceware.org/binutils/docs/ld

GAS Assembler: http://sourceware.org/binutils/docs/as

ELF Utilities: http://sourceware.org/binutils/docs/binutils

GDB Debugger: http://sourceware.org/gdb/current/onlinedocs/gdb

Newlib Standard C Libraries: http://sourceware.org/newlib

Eclipse-Indigo IDE: http://help.eclipse.org/indigo/index.jsp

2. Epiphany Multicore Development IDE (ECLIPSE)

Note: The Eclipse based Epiphany IDE is outdated and not in sync with the current generation of Epiphany platforms, which means platforms newer than the EMEK3 and EMEK4 boards. Some of the features presented in this chapter are not applicable to the ZYNQ based system such as Parallella Prototype (ZedBoard) and Parallella computers.

In particular, the debugging and launching of an Epiphany application from the Eclipse IDE is currently not supported. It is still a valuable tool for writing Epiphany applications, especially for the host-accelerator model.

Currently, the IDE is not supported on the ARM based platforms, so one needs an x86 (PC) based machine to use it.

2.1 Overview

The Epiphany SDK IDE is based on Eclipse, a multi-language and multi-platform software development environment comprising an integrated development environment (IDE) and an extensible plug-in system. The Eclipse development environment was started by IBM and subsequently released as open source in 2001 and is today one of the world's most popular development environments with millions of users. The Epiphany IDE is multicore ready, and includes all the features a programmer would expect from a state of the art IDE:

Creating, editing, navigating, and building C based projects

Integration with a GDB debugger

Multicore context viewing

Source level debugging



Figure 2.1 The Eclipse IDE

The rest of this chapter will go through a number of tutorials to explain the basic operations of Eclipse.

2.2 Epiphany IDE tutorial

Run the Eclipse environment by typing eclipse at the Linux prompt:

```
$ ${EPIPHANY_HOME}/e-eclipse &
```

The Eclipse window opens. Choose the workspace which is where your projects and environment will be saved:

😣 Worksj	pace Launcher
Select a wo	rkspace
Eclipse store Choose a wo	es your projects in a folder called a workspace. orkspace folder to use for this session.
Workspace:	/home/username/workspace Browse
Use this	as the default and do not ask again Cancel OK

Figure 2.2: The Workspace Launcher

The Eclipse Welcome window opens, ready for making the first project. Select the Workbench icon to get to the project views.



Creating a project

Next, select File \rightarrow New \rightarrow C Project. Choose a name for the new project in the Project name field and select the Epiphany Executable (Multi Core) \rightarrow Hello World Epiphany Multicore C-Project type. The Epiphany tool chain is the only tool chain option for this type of project. This project will generate a simple multicore sample project that can be used as a template for building your system.

You can also choose an Empty or Hello World ANSI C project type under Executable. The Linux GCC tool chain is used for creating a Linux x86 program that can be run in a native Linux environment as a host application or as a software verification reference.

😣 C Project		
C Project		
Create C project of selected type		
Project name: hello_world_mc		
☑ Use default location		
	bello world mc	Browse
	hello_wond_nic	
Choose file system: default 🔻		
Project type:	Toolchains:	
🛨 🔁 GNU Autotools	Epiphany	
🛨 📂 Executable		
🛨 🔁 Shared Library		
🛨 🔁 Static Library		
🛨 🔷 Epiphany Executable (Single Core)		
Epiphany Static Library		
Epiphany Executable (Multi Core)		
Hello World Epiphany Multicores C Project		
🛨 🔁 Makefile project		
Show project types and toolchains only if they are supported on the platform		
(?) < Back	Next > Cancel	Finish

Figure 2.3: Project Definition Selection

Press the Next> button and set the project's basic settings. The number of rows and number of columns set the size of the active portion of the Epiphany core matrix. The start row and start column set the address (2D index) of the first core in the array. Please refer to the board support package reference to get information regarding the actual memory map of a specific platform.

😣 C Project	
Basic Settings	
Basic properties of a project	
Number of rows in project	μ
Number of columns in project	4
Row number of first core	32
Column number of first core	36
(()	< Back Next > Cancel Finish

Figure 2.4: Application Target Cores Allocation

Press the Next> button twice to approve and then the Finish button. The wizard then creates the sample project. Depending on the configuration, this step can take some time to complete.

The number of per-core and the common projects are visible plus an extra, non-source master meta-project.

Eclipse Workbench work flow utilizes the Perspectives concept. A Perspective is the collection of Views and Editors comprising the current state of the Workbench and are related to a certain task (like code edit, application debug, etc.). When launched, the Workbench enters the C/C++ perspective which lets you edit code and build your application. Visible now is a simple multicore Hello World style project which is a skeleton for developing your system. You should add code which is common to all cores in the commonlib project. Code specific to a core should be added to the relevant core's project.



Figure 2.5: C/C++ Perspective for Multicore Application

Building and executing

We recommend that you set the Save automatically before build option in the Window \rightarrow Preferences \rightarrow General \rightarrow Workspace dialog before building the project. Also, before loading and executing an application, make sure the e-server is running, to allow Eclipse communicate with the hardware target.

You may need to set the memory layout of your application. Depending on the size of your code and data, you can place them in the external or internal memory. The newlib code (the Standard C library) and the program stack can be placed internally or externally as well. This can be done using special linker keywords, as described in chapter 5.5. However, the fastest and recommended way is to choose one of the three predefined linker description files that are provided with the hardware target package. Set the LDF option in by selecting one of the per-core projects and from the menu Project \rightarrow Properties \rightarrow C/C++ Build \rightarrow Settings \rightarrow linker description file browse for the required *.ldf file, located in the bsps directory of the eSDK installation. Then, apply the settings to the other core projects by right-clicking on the core project and selecting the action from the context menu.

You can now build and run the application. Select $Project \rightarrow Build All$ to build all the projects. To simply load and run the project on the hardware, select the meta-project, then select menu Run \rightarrow Run Configurations... to create the context. Right-click on the Epiphany Multicore Application (loader) and select New. The application item appears like in Figure 2.6. Select the application and press Run. The application will now be loaded on the target via the loader, the target will be reset and the application will run.

Debugging a project

After building the project, as described above, select menu Run \rightarrow Debug Configurations..... Right-click on the Epiphany Multicore Applications (gdb) and select New. The application item appears. Select the application item. Make sure that in the Projects tab, the Enable auto build option is selected and press Debug. The Perspective should now change to the Debug perspective. Depending on a previous Eclipse configuration, the perspective will not change. You can do this manually by pressing the Open Perspective button at the topright corner.

😣 Run Configurations				
Create, manage, and run configurations				
RUN MODE				
[] 🗎 🗶 🖻 🕻 ▼	Name: hello_world_mc Debug (1)			
type filter text	Main E-loader options			
C/C++ Application	C/C++ Application:			
C/C++ Remote Application			Search Project	B <u>r</u> owse
😨 DSF PDA Application	Project:			
Epiphany Multi Core Applications (loader)	hello_world_mc			<u>B</u> rowse
Launch Group	Build (if required) before launching			
	Build configuration:	Use Active		▼
		Select configuration using 'C/C	++ Application'	
	 Enable auto build 	 Disable auto bi 	uild	
	Use workspace settings	Configure Workspa	ace Settings	
	obe workspace sectings	<u>conngare workspe</u>	<u>lee betangs</u>	
			vlqqA	Revert
Filter matched 6 of 6 items				
			01	Dur
			Close	Run

Figure 2.7: Debug Configuration Settings

Ø Debug Configurations	
Create, manage, and run configurations	
DEBUG MODE	
	ł
1 🗈 🗶 🖻 券▼	Name: hello_world_mc Debug
type filter text	Targets/e-gdb selection Projects Common Source
C/C++ Application	Host name of the e-gdbserver running machine
C/C++ Attach to Application	localhost
C/C++ Postmortem Debugger	The base port number where the e-gdbserver will accept connections
C/C++ Remote Application	51000
DSF PDA Application	Initialization Commands
Epiphany Multi Core Applications (gdb)	
Epiphany Single Core Application (adb)	
GDB Hardware Debugging	
 Launch Group 	☑ Stop at main
🙆 Snapshot Album	☑ Resume (Run untill breakpoit)
	E-gdb verbose mode
Filter matched 11 of 11 items	Apply Revert
?	Close Debug



Figure 2.8: Debug Perspective

In the Debug view you can see a session for the meta-project and the sessions for the multiple core projects. Each core session includes levels for Target, Threads and Contexts. The first thread is intended for interactive GUI style debugging. The e-gdb thread is intended for Console style debugging. The threads work in conjunction with each-other and actions taken in one affect the other.

In the meta-project session there are two levels as well, where the Target level lets you Resume, Suspend and Terminate all core projects and the Thread level lets you perform the regular stepwise debug operations. Note that multiple Threads and Contexts can be selected (by pressing the Ctrl key while selecting the items) and the debug operations will take place on the multiple selected sessions. Breakpoints that are set in the common source files will affect all projects, and the execution of each thread will be halted when the breakpoint is reached.

If the application includes standard output and input function calls (like printf()), the interaction is made through the Console view. Select the associated e-gdb process from the Debug view and the relevant Console becomes active.

Debugging a single core of a multicore project

It is sometimes required, during a development of the application, to debug just one core. In this case, select the binary executable (*.elf file) of the core you want to debug. Right-click and choose Debug As $> \rightarrow$ Debug Configurations..... Right-click on Epiphany Single Core Application (gdb) and select New. Select the new item. You should now change the Port Number to the one that is associated with the core and press the Debug button.

Note: Debugging and launching an Epiphany application from the Eclipse IDE is currently not supported on all platforms.

Creating a single core application

If the required application should be developed and run on a single core, you can choose the Epiphany Executable (Single Core) type from the Project Definition Selection dialog (Figure 2.3) and continue with the similar steps to create, edit, build and debug the application.



Figure 2.9: C/C++ Perspective for Single Core Application

2.3 Online Eclipse Help for Common Tasks

The following topics contain links to further online help guides for some useful general tasks supported by the Eclipse development environment:

Adding Include Paths and Symbols:

http://help.eclipse.org/indigo/topic/org.eclipse.cdt.doc.user/tasks/cdt_t_proj_paths.htm

Customizing the C/C++ editor:

http://help.eclipse.org/indigo/topic/org.eclipse.cdt.doc.user/tasks/cdt_t_cust_cpp_editor.htm

Navigating C/C++ declarations:

http://help.eclipse.org/helios/topic/org.eclipse.cdt.doc.user/tasks/cdt_t_open_declarations.htm

Refactoring C/C++ Code:

http://help.eclipse.org/indigo/topic/org.eclipse.cdt.doc.user/tasks/cdt_t_refactoring.htm

Debugging a program:

http://help.eclipse.org/indigo/topic/org.eclipse.cdt.doc.user/tasks/cdt_o_debug.htm

2.4 Updating the Eclipse Installation

Updating the Eclipse installation can be done in two ways – manual and automatic. Manual mode involves downloading a plugins pack and extracting it in the eclipse/plugin directory. In order to have it done automatically, use Eclipse's Install New Software feature available from the Help menu. A dialog like this opens:



😣 Install		
Available Software		
Check the items that you wish to install.		
Work with: Adapteva Eclipse Update Site - http://ftp.adap	teva.com/eclipse	Add
Find more	software by working with the <u>"Available Software Site</u>	es" preferences.
type filter text		4
Name	Version	
– 💿 🚥 Epiphany CDT Main Features		
Il items are installed		
Select All Deselect All		
Details		
Epiphany CDT Main Features		
		▼
		More
Show only the latest versions of available software	Hide items that are already installed	
Group items by category	What is <u>already installed</u> ?	
Show only software applicable to target environment		
Contact all update sites during install to find required so	oftware	
(?)	< Back Next > Cancel	Finish
Ŭ		

Click Add... and fill in "Adapteva Eclipse Update Site" for the name and http://ftp/adapteva.com/eclipse for the location. Then, a list of available updates appears. Check the optional checkboxes to filter out irrelevant updates and select the required update. Then click Next> to confirm.

3. C/C++ Compiler (E-GCC)

3.1 Overview

This chapter gives a high level overview of the Epiphany compiler, based on the popular GNU GCC compiler. The purpose of this chapter is to summarize the important features and to document additional features that are not included in the baseline GNU distribution.

The GCC compiler supports the following versions of C/C++:

- ISO/IEC 9899:1990 (C89)
- ISO/IEC 9899:1999 (C99)
- ISO/IEC 9899:2011 (C11) (partial)
- ISO/IEC 14882:1998 (C++98)
- ISO/IEC 14882:2011 (C++11) (partial)

Support for C99 is substantial but not 100% complete. For a review of the minor C99 features not supported in GCC, please refer to: <u>http://gcc.gnu.org/c99status.html</u>. Similarly, C11 and C++11 are new standards and their support is partial. More info here: <u>http://gcc.gnu.org/onlinedocs/gcc/Standards.html</u>.

3.2 Simple Example

The following example shows how to use the compiler to create an executable from a simple program source file without any optimization.

The following example shows some the usage of some of the compilation switches used to produce executables highly optimized for speed at the expense of code size.

```
$ e-gcc my_fft.c -o my_fft.elf -O3 -ftree-vectorize -funroll-loops \
        -mfp-mode=round-nearest -mfused-madd -ffast-math
```

3.3 Compiler Command-line Options

The GCC compiler supports a wide range of options allowing for fine grain compilation process.

The following tables summarize the compiler most commonly used options grouped by type.

Option	Function
-c	Compile or assemble source code, but do not link
-S	Stop after compilation proper; do not assemble
-E	Stop after the preprocessing stage
-o file	Place output in file <i>file</i> .
-x language	Specify explicit <i>language</i> of input file rather than letting GCC
	determine language based on file name suffix. Valid values for
	language are: 'c', 'c++'
-std=standard	Determine the language standard. To support C99, specify "-std=c99"
-D name=definition	The contents of <i>definition</i> are tokenized and processed as if they
	appeared in a '#define' directive.
-Wa,option	Pass option as an option to the assembler.
-1 <i>library</i>	Search the library named <i>library</i> when linking. It makes a difference
-1 library	where in the command you write this option; the linker searches and
	processes libraries and object files in the order they are specified. The
	directories searched include several standard system directories plus
	any that you specify with '-L'.
version	Print the version number of the compiler
-Idir	Add the directory <i>dir</i> to the list of directories to be searched for header
	files.
-Ldir	Add directory <i>dir</i> to the list of directories to be searched for '-l'.
help	Print (on the standard output) a description of the command line
	options understood by gcc.
help=class	Print (on the standard output) a description of the command line
	options understood by the compiler that fit into a specific class. The
	class can be one of 'optimizers', 'warnings', 'target', 'params', or
	'language'.
@file	Read command-line options from file.

Table 3.1: General Compiler Options

Option	Function	
-W	Inhibit all warning messages	
-Werror	Make all warnings into errors	
-Werror=	Make the specified warning into an error	or
-fsyntax-only	Check the code for syntax errors, but do	on't do anything beyond that.
-Wfatal-errors	This option causes the compiler to abor	t compilation on the first error
	occurred rather than trying to keep goin	g and printing further error messages.
-pedantic	Issue all the warnings demanded by stri	ct ISO C and ISO C++; reject all
-	programs that use forbidden extensions	, and some other programs that do not
	follow ISO C and ISO C++	
-Wall	This enables all the warnings about con	structions that some users consider
	questionable, and that are easy to avoid	. We highly recommend running with
	this switch turned on for new code. The	e switch turns on the following
	warnings:	
	-Waddress	-Warray-bounds (only with '-O2')
	-Wc++0x-compat	-Wchar-subscripts
	-Wimplicit-int	-Wimplicit-function-declaration
	-Wcomment	-Wformat
	-Wmain (only for C/ObjC and unless '-	ffreestanding')
	-Wmissing-braces	-Wnonnull
	-Wparentheses	-Wpointer-sign
	-Wreorder	-Wreturn-type
	-Wsequence-point	-Wsign-compare (only in C++)
	-Wstrict-aliasing	-Wstrict-overflow=1
	-Wswitch	-Wtrigraphs
	-Wuninitialized (only with '-O1' and at	bove)
	-Wunknown-pragmas	-Wunused-function
	-Wunused-label	-Wunused-value
	-Wunused-variable	

Table 3.2: Warning Options

Table 3.3: Debug Options

Option	Function
-g	Produce debugging information in stabs format.
-pg	Generate extra code to write profile information suitable for the analysis
	program gprof.

Table 3.4: Linker Options

Option	Function
-nostartfiles	Do not use the standard system startup files when linking.
-nodefaultlibs	Do not use the standard system libraries when linking.
-nostdlib	Do not use the standard system startup files or libraries when linking.

-S	Remove all symbol table and relocation information from the executable.
-static	On systems that support dynamic linking, this prevents linking with the
	shared libraries. On other systems, this option has no effect.
-shared	Produce a shared object which can then be linked with other objects to
	form an executable.
-Xlinker option	Pass option as an option to the linker.

 Table 3.5: Optimization Options

Option	Function	
-O0	Reduce compilation time and make debugging produce the expected	
	results. This is the default.	
-01	'-O or –O1' turns on the following optimization flags:	
	-fauto-inc-dec	-fcprop-registers
	-fdce	-fdefer-pop
	-fdelayed-branch	-fdse
	-fguess-branch-probability	-fif-conversion2
	-fif-conversion	-finline-small-functions
	-fipa-pure-const	-fipa-reference
	-fmerge-constants -fsplit-wide-typ	Des
	-ftree-ccp	-ftree-ch
	-ftree-copyrename	-ftree-dce
	-ftree-dominator-opts	-ftree-dse
	-ftree-fre	-ftree-sra
	-ftree-ter	-funit-at-a-time
	'-O' also turns on '-fomit-frame-p	oointer'
-O2	GCC performs nearly all supported optimizations that do not involve a	
	space-speed tradeoff. It turns on all optimization flags in O1 and the	
	following additional flags:	
	-fthread-jumps	-falign-functions
	-falign-jumps	-falign-loops
	-falign-labels	-fcaller-saves
	-fcrossjumping	-fcse-follow-jumps
	-fcse-skip-blocks	-fdelete-null-pointer-checks
	-fdevirtualize	-fexpensive-optimizations
	-fgcse	-fgcse-lm
	-finline-small-functions	-findirect-inlining
	-fipa-sra	-foptimize-sibling-calls
	-fpartial-inlining	-fpeephole2
	-fregmove	-freorder-blocks
	-freorder-functions	-frerun-cse-after-loop
	-fsched-interblock	-fsched-spec

	-fschedule-insns	-fschedule-insns2
	-fstrict-aliasing	-fstrict-overflow
	-ftree-switch-conversion	-ftree-pre
	-ftree-vrp	
-03	Optimize yet moreO3 turns on a	all optimizations specified by -O2 and
	also turns on:	
	-finline-functions	-funswitch-loops
	-fpredictive-commoning	-fgcse-after-reload
	-ftree-vectorize	-fipa-cp-clone
-Os	Enables all optimization switches	of O2, except for the following:
	-falign-functions	-falign-jumps
	-falign-loops	-falign-labels
	-freorder-blocks	-freorder-blocks-and-partition
	-fprefetch-loop-arrays	-ftree-vect-loop-version
-funroll-loops	Unroll loops whose number of ite	rations can be determined at compile
	time or upon entry to the loop.	
param name=value	In some places, GCC uses various	s constants to control the amount of
	optimization that is done.	
	max-unrolled-insns:	
	The maximum number of instructions that a loop should have if that	
	loop is unrolled, and if the loop is	unrolled, it determines now many
	times the loop code is unrolled.	
	max-unroll-times:	
	The maximum number of unrollin	igs of a single loop.

Table 3.6: Floating Point Math Options

Option	Function
-fsingle-precision-	Treat floating point constant as single precision constant instead of
constant	implicitly converting it to double precision constant.
-funsafe-math-	Enables '-fno-signed-zeros', '-fno-trapping-math', '-fassociative-math'
optimizations	and '-freciprocal-math'.
-freciprocal-math	Allow the reciprocal of a value to be used instead of dividing by the
	value if this enables optimizations.
-ffast-math	Sets '-fno-math-errno', '-funsafe-math-optimizations', '-ffinite-math-
	only', '-fno-rounding-math', '-fno-signaling-nans' and '-fcx-limited-
	range'. This option causes the preprocessor macroFAST_MATH
	to be defined
-fno-trapping-math	Compile code assuming that floating-point operations cannot generate
	user visible traps.
-fno-signed-zeros	Allow optimizations for floating point arithmetic that ignore the
	signedness of zero.

	Table 3.7: Epiphany Unique Options
Option	Function
-mprefer-short-insn-regs	Preferentially allocate registers that allow short instruction generation. This can result in increased instruction count, so if this reduces or increases code size might vary from case to case.
-mbranch-cost=num	Set the cost of branches to roughly <i>num</i> "simple" instructions. This cost is only a heuristic and is not guaranteed to produce consistent results across releases.
-mcmove	Enable the generation of conditional moves.
-mnops=num	Emit <i>num</i> nops before every other generated instruction.
-mno-soft-cmpsf	For single-precision floating point comparisons, emit an fsub instruction and test the flags. This is faster than a software comparison, but can get incorrect results in the presence of NaNs, or when two different small numbers are compared such that their difference is calculated as zero. The default is -msoft-cmpsf, which uses slower, but IEEE-compliant, software comparisons.
-mno-round-nearest	Make the scheduler assume that the rounding mode has been set to truncating. The default is -mround-nearest.
-mlong-calls	If not otherwise specified by an attribute, assume all calls might be beyond the offset range of the b / bl instructions, and therefore load the function address into a register before performing a (otherwise direct) call. This is the default.
-mshort-calls	If not otherwise specified by an attribute, assume all direct calls are in the range of the B/BL instructions, so use these instructions for direct calls. The default is -mlong-calls.
-msmall16	Assume addresses can be loaded as 16 bit unsigned values. This does not apply to function addresses for which -mlong-calls semantics are in effect.
-mfp-mode= <i>mode</i>	Set the prevailing mode of the floating point unit. This determines the floating point mode that is provided and expected at function call and return time. Making this mode match the mode you predominantly need at function start can make your programs smaller and faster by avoiding unnecessary mode switches. <i>mode</i> can be set to one the following values: `caller' Any mode at function entry is valid and retained or restored

	when the function returns, and when it calls other functions. This mode is useful for compiling libraries or other compilation units you might want to incorporate into different programs with different prevailing FPU modes, and the convenience of being able to use a single object file outweighs the size and speed overhead for any extra mode switching that might be needed, compared with what would be needed with a more specific choice of prevailing FPU
	mode.
	This is the mode used for floating point calculations with truncating (i.e. round towards zero) rounding mode. That includes conversion from floating point to integer.
	`round-nearest'
	This is the mode used for floating point calculations with round-to-nearest-or-even rounding mode.
	`int'
	This is the mode used to perform integer calculations in the FPU, e.g. integer multiply, or integer multiply-and-accumulate.
-mno-postmodify	Code generation tweaks that disable, respectively, splitting of 32 bit
	loads, generation of post-increment addresses, and generation of post-modify addresses. The defaults are msplit-lohi, -mpost-inc, and -mpost-modify.
-mnovect-double	Change the preferred SIMD mode to SImode. The default is - mvect-double, which uses DImode as preferred SIMD mode.
-max-vect-align=num	The maximum alignment for SIMD vector mode types. <i>num</i> may be 4 or 8. The default is 8.
-m1reg- <i>reg</i>	Specify a register to hold the constant -1, which makes loading small negative constants and certain bitmasks faster. Allowable values for reg are r43 and r63, which specify to use that register as a fixed register, and none, which means that no register is used for this purpose. The default is -m1reg-none.
For the Epiphany architecture, some useful optimization options are -falign-loops=8 and -falign-functions=8. These options direct the compiler to generate code, where the first instructions in the body of a loop or in a function are double-word aligned. Thus, the processor's alignment buffer is kept full from the first fetch after a branch (pipeline flush). -ffast-math can make math calculation faster by omitting some floating-point calculation restrictions and relaxing the standard conformance.

3.4 GNU Function Attributes

In GCC, you declare certain things about functions called in your program which help the compiler optimize function calls and check your code more carefully. The keyword __attribute__ allows you to specify special attributes when making a declaration. This keyword is followed by an attribute specification inside double parentheses:

alias	aligned	alloc_size
always_inline	artificial	cold
const	constructor	deprecated
destructor	error	externally_visible
flatten	format	format_arg
gnu_inline	hot	malloc
noreturn	returns_twice	noinline
nonnull	nothrow	pure
sentinel	no_instrument_function	section
used	unused	weak
warn_unused_result	warning	

3.5 Epiphany Specific Compiler Attributes

The Epiphany compiler also supports a number of attributes used by the linker descriptor file for easy and explicit memory management. These attributes can be found in the linker chapter of this manual.

4. Assembler (E-AS)

4.1 Overview

The Epiphany assembler, 'e-as', parses a file of assembly code to produce an object file for use by the linker 'e-ld'.

4.2 Simple Example

The following example shows how to use the assembler to create an object file.

\$ e-as my.s -o my-object-file.o

4.3 Command Line Options

Option	Function
-o <i>file</i>	Create object file with name <i>file</i> .
-W	Suppress warning messages
version	Print the version number of the assembler
-Idir	Add the directory <i>dir</i> to the list of directories to be searched for .include files
-g	Generate debugging information
-L	Keep local symbols
help	Print (on the standard output) a description of the command line options

Table 4.1: Assembler Command Line Options

4.4 General Syntax

The 'e-as' assembler syntax closely follows the "AT&T" style of assembly programming.

Whitespace is one or more blanks or tabs, in any order. Whitespace is used to separate symbols, and to make programs neater for people to read.

There are four ways of rendering comments to 'e-as':

Anything from '/*' through the next '*/' is a comment. There is no nesting of comments

Anything to the right of the character ';' is a comment

Anything to the right of the character '#' is a comment

Anything to the right of '//' is a comment

A symbol is one or more characters chosen from the set of all letters (both upper and lower case), digits and underscore '_'.

A statement ends at a newline character $(^{\n})$ or line separator character. The newline or separator character is considered part of the preceding statement. Newlines and separators within character constants are an exception: they do not end statements. It is an error to end any statement with end-of-file: the last character of any input file should be a newline.

You may write a statement on more than one line if you put a backslash ('\') immediately in front of any newlines within the statement. When 'e-as' reads a backslashed newline both characters are ignored. You can even put back-slashed newlines in the middle of symbol names without changing the meaning of your source program.

A constant is a number, written so that its value is known by inspection, without knowing any context, as shown in the examples below:

.byte 74, 0112, 092, 0x4A, 0X4a, 'J, 'J # All the same value.

.ascii "Ring the bell\7" # A string constant.

.octa 0x123456789abcdef0123456789ABCDEF0 # A bignum.

.float 0f-31415926535E-10 # (-PI), a flonum.

A string is written between double-quotes. It may contain double-quotes or null characters. The way to get special characters into a string is to escape these characters: precede them with a backslash '\' character. For example '\\' represents one backslash: the first '\' is an escape which tells as to interpret the second character literally as a backslash (which prevents 'e-as' from recognizing the second '\' as an escape character).

Integer values can be expressed in multiple formats for ease of use:

A binary integer is '0b' or '0B' followed by zero or more of the binary digits '01'.

An octal integer is '0' followed by zero or more of the octal digits ('01234567').

A decimal integer starts with a non-zero digit followed by zero or more digits ('0123456789').

A hexadecimal integer is '0x' or '0x' followed by one or more hexadecimal digits chosen from '0123456789abcdefABCDEF'.

Integers have the usual values. To denote a negative integer, use the unary minus operator '-'.

4.5 Assembler Syntax Reference

Directive	Description	Syntax	Example
.include	Include a file	.include "file"	.include "bsp0.inc"
.balignw	Halfword align the following code to	.balignw	.balignw 8,0x01a2
	<i>alignment</i> byte boundary (default=4).	{alignment}	
	Fill skipped words with <i>fill</i>	{,fill}	
	(default=0).		
.balignl	Word align the following code to	.balignl	.balignl 8,0x01a2
	<i>alignment</i> byte boundary (default=4).	{alignment}	
	Fill skipped words with <i>fill</i>	{,fill}	
	(default=0).		
.end	Marks the end of the assembly file.	.end	.end
	Data following this directive is not		
	processed.		
.fail	Generates errors or warnings during assembly.	.fail expr	.fail 1
.err	Generate an error during assembly.	.err	.err
.print	Print a string to standard output during	.print string	.print "Assembly
-	assembly.		error"
.section	Tell the assembler to assemble the	.section expr	.section data
	following in section <i>expr</i> . <i>expr</i> can be		
	either .text , .data , .bss , or any symbol		
	described in the linker description file		
.text	Tells assembler to process the	.text	.text
	following as 'text' and tells linker to	{subsection}	
	place it in data memory area		
.data	Tells assembler to process the	.data	.data
	following as 'data' and tells linker to	{subsection}	
	place it in data memory area		
.bss	Tells assembler to process the	.bss	.bss
	following as 'bss 'and to place it in bss	{subsection}	
	memory area		
.struct	Tells assembler to assemble the	.struct <i>expr</i>	.struct 0
	following in an absolute section		field1:
			.struct field1+4
	Following and is inserted at the start	000 000 1-	11eld2:
.org	of the appointed as the start	.org new-lc	.org 0x2000
	of the specified section plus the offset		
	specified as <i>new-ic</i> .		

Table 4.2: Assembler Control Directives

Directi ve	Description	Syntax	Example
.equ	Set value of symbol equal to <i>expr</i>	.set symbol, expr	.set Version, "0.1"
.801		• • • •	· • •
.equiv	Sets the value of symbol equal to <i>expr</i> and generates an error if it was previously defined.	.equiv symbol, expr	"0.1"
.global	Makes symbol visible to linker	.global <i>symbol</i>	.global MyFunc

Table 4.3: Assembler Symbol Directives

Directive	Description	Syntax	Example
.byte	Define byte <i>expr</i> (8 bits) in	.byte expr{,}	.byte 25,0x11,031
	memory		
.hword .short	Define hword <i>expr</i> (32 bits) in	.hword expr{,}	.hword 0x5
	memory		
.word .int	Define word <i>expr</i> (32 bits) in	.word expr $\{,\}$.word 0x32
.long	memory		
.ascii	Define string, non-zero	.ascii <i>expr</i> {}	.ascii "Hello"
	terminated array of bytes.		
.asciz .string	Define <i>string</i> , zero terminated	.string <i>expr</i> {}	.string "Hello
	array of bytes.		World!\"
.float	Define 32bit IEEE number in	.float <i>expr</i>	.float
	memory		0f3.14,0f359.1
.double	Define 64bit IEEE number in	.double <i>expr</i>	.double 0f2e1
	memory		
.fill	Generate <i>repeat</i> copies of <i>value</i>	.fill repeat {,size }	.fill 32,4,0xffffffff
	that is of size <i>size and</i>	{,value}	

Table 4.5: Assembler Looping Directives

Directive	Description	Syntax	Example
.rept	Repeat the sequence of lines	.rept count	.rept 10
	between .rept end .endr count		
	number of times		
.endr	Ends .rept sequence	.endr	.endr

Directive	Description	Syntax	Example
.if	Assembles if absolute expression is	.if {absolute_expr}	.if(2+4)
	not zero		
.elseif	Used in conjunction with .if	.elseif	.elseif(2+3)-5
		{absolute_expr}	
.else	Used in conjunction with .if	.else	.else
.endif	Ends an .if block	.endif	.endif
.ifdef	Assembles if symbol exists	.ifdef symbol	.ifdef _my_test_
.ifndef	Assembles if symbol does not exists	.ifndef symbol	.ifndef _my_test_
.ifc	Assemble if <i>strings</i> are the same	.ifc string1,string2	.ifc "str1", "str2"
.ifnc	Assemble if <i>strings</i> are not the same	.ifnc string1,string2	.ifnc "str1", "str2"

Table 4.6: Assembler Conditional Directives

Table 4.7: Assembler Macro Directives

Directive	Description	Syntax	Example
.macro	Defines a macro.	macro name	Definition:
	• A macro can be defined without	{args}	.macro ArgMacro
	arguments		arg1,arg2
	• Arguments can be accessed by		
	name		Use:
	Macros can be accessed as		ArgMacro 10,11
	ordered list or by reference		ArgMacro
	arguments		arg2=11,arg1=10
.endm	Marks the end of a macro	.endm	.endm
\@	Pseudo variable that contains the	\@	MyLable@
	macro number . Can be used to		
	generate a unique number on every		
	macro definition		

Table 4.8: Assembler Digit Encoding

Туре	Base	Prefix	Digits	Example
Decimal Integer	10		0-9	67
Hexadecimal Integer	16	0x or 0X	0-9,A-F	0x43
Octal Integer	8	0	0-7	083
Binary Integer	2	0b or 0B	0-1	0b01000011
Floating Point Number	10	Of or OF	0-9	0f0.67e+2
Character	n/a	٢	ASCII Symbol	'С
String	n/a	" and "	ASCII Symbol(s)	"Sixty Seven"

Operation	Symbol	Precedence
Negate	-	
Compliment	~	Highest
Multiplication	*	
Division	/	
Remainder	00	
Left Shift	<< or <	
Right Shift	>> or >	
Bitwise OR		
Bitwise AND	â	
Bitwise XOR	^	
Bitwise OR-NOT	!	
Addition	+	Lowest
Subtraction	_	Lowest

Table 4.9: Assembler Expression Operators

5. Linker (E-LD)

5.1 Overview

The Epiphany linker 'e-ld' combines a number of objects and archives, relocates their data and resolves symbol references. The following section gives a brief overview of the operations of the linker.

5.2 Simple Examples

The following example shows how to use the linker to create an elf executable from an object file using the default linker file for simulation using the Epiphany instruction set simulator.

```
$ e-ld my_object.o -o exec.elf
```

The following example shows how to use the linker to create an elf executable for the Epiphany multicore evaluation kit.

```
$ e-ld -T $EPIPHANY_HOME/bsps/zedboard/fast.ldf \
    my_object.o -o exec.elf
```

5.3 Command Line Options

Option	Function
-Lsearchdir	Adds directory paths to the list of paths that 'e-ld' will search for
	archive libraries and linker control scripts. The option can be used
Ilbrary-path=searchair	multiple times, in which case directories are searched in the order
	in which they are specified on the command line. If <i>searchdir</i>
	begins with =, then the = will be replaced by the sysroot prefix, a
	path specified when the linker is configured.
	The system and ice and he would be appoint the applicit symphol for
-e entry	The <i>entry</i> option can be used to specify the explicit symbol for
entry= <i>entry</i>	beginning execution of your program, rather than the default entry
5	point. If there is no symbol named entry, the linker will try to parse
	<i>entry</i> as a number, and use that as the entry address. (Numbers
	without a prefix will be interpreted in base 10; numbers starting
	with 0x will be interpreted as base 16.)
-M	Prints a link map to the standard output, including information
print-map	about: Object file memory placement, Common symbol,
print-inap	allocation, Symbol value assignments
-o output	Specifies name of the output file of the link process. Without this
	option, the default output name is 'a.out'.
output=output	
	Our to all according from the accord file
-S	Omit all symbol information from the output file.
strip-all	
-S	Omit debugger symbol information (but not all symbols) from the
	output file.
strip-debug	
-T scriptfile	Replaces the default linker script file with <i>scriptfile</i> . If script file
script-scriptfile	does not exist in the current directory, the linker looks for it in the
sempt=semptjue	directories specified by any `-L' options. Multiple `-T' options
	accumulate.
-u symbol	Forces <i>symbol</i> to be entered in the output file as an undefined
	symbol.
undermed_symbol	
@file	Read command-line options from <i>file</i> . Options in <i>file</i> are separated
	by whitespace. The <i>file</i> itself may contain additional file may
	@file options, allowing for modular linker configuration.

Table 5.1: Linker Command Line Options

5.4 Linker Script Overview

The link process is controlled by a linker script written in the GNU linker command language. The purpose of the linker script is to describe how the sections in the input files should be mapped into the output file, and to control the memory layout of the output file. If you do not supply a linker file to 'e-ld', it will use a default linker file.

Executables compiled with the default linker will only execute correctly using the 'e-run' instruction set simulator and will not work correctly when loaded on specific hardware targets. To correctly link for specific hardware targets, you should use the '-T' option to specify one of the board specific linker files that come with the board support package (BSP) or your own custom linker file.

The following list highlights some of the key concepts of the linker:

- The assembler emits an object file (partial program) with an assumed start at address 0. The linker then reads one or more object files and combines their contents to form a runnable program with no program overlap and all addresses completely resolved.
- The linker script contains a number of defined input sections and output sections. These section names can be used within the source code to assist in fine grained code and data placement as explained in the following sections.
- Every object file has a list of symbols, known as the symbol table. A symbol may be defined or undefined. Each symbol has a name, and each defined symbol has an address.
- When compiling a C program into an object file, you will get a defined symbol for every defined function and global or static variable. Every undefined function or global variable which is referenced in the input file will become an undefined symbol.

5.5 Explicit Code and Data Memory Management

The linker description files that come with the different Epiphany Board Support Packages have a number of key words that allow fine grained management of code and data placement from within the C/C++ source code. The keywords gives the programmer and support libraries complete control of the placement of data and code within the memory system on a per-symbol, per-file, and per-object library. The keywords are derived from section names within the linker descriptor file and can be augmented by the user at his discretion. Table 5.2 gives a summary of the memory placement keywords available in all Epiphany BSPs that can be used within your C code.

Keyword	Meaning
core_row	The row ID of the core
core_col	The column ID of the core
stack_start	Stack starting point
heap_start	Heap starting point
heap_end	Heap ending point

Table 5.2: Memory Management Linker Symbols

Table 5.3 shows configurations of the three basic linker descriptor files. The 'legacy' scenario is to be used for bringing up code quickly but will run slowly since all data and code is placed in external memory. The 'fast' scenario is used to place user code internally and standard library 'code externally. The 'internal' scenario can be used for to effectively place all code and data in the local memory by default. The three descriptor files effectively determine the default placement of all sections and symbols within the objects. The user can override these settings on an individual basis from the C/C++ source code using the attributes defined in Table 5.2 to specify that certain variables and/or functions should be placed in specific program output sections. Note that with all of the predefined LDF's, the heap is allocated externally. This means that use of stdio library will render the program very slow.

File	USER CODE & DATA	STANDARD LIBRARY	STACK	NOTE
legacy.ldf	External	External	External	Use to run any legacy code
	SDRAM	SDRAM	SDRAM	with up to 1MB of combined
				code and data.
fast.ldf	Internal	External	Internal	Places all user code and static
	SRAM	SDRAM	SRAM	data in local memory,
				including the stack. Use to
				implement fast critical
				functions. It is the user's
				responsibility to ensure that
				the code fits within the local
				memory.
internal.ldf	Internal	Internal	Internal	Places all code and static data
	SRAM	SRAM	SRAM	in local memory, including
				the stack. Use to implement
				fastest applications. It is the
				user's responsibility to ensure
				that the code fits within the
				local memory.

Table 5.3: Memory Management Scenarios

Table 5.4: Linker Sections

Section	User Controllable Sections
.text	Application code, read only
.data	Application data (global variables that are not constant)
.rodata	Application data, read only (constants, strings)
.bss	Static variables initialized to zero
.text_bank0	Starts at end of reserved section in bank0
.text_bank1	Starts at the beginning of bank1
.text_bank2	Starts at the beginning of bank2
.text_bank3	Starts at the beginning of bank3
.data_bank0	End of .text_bank0
.data_bank1	End of .text_bank1
.data_bank2	End of .text_bank2
.data_bank3	End of .text_bank3
.code_dram	Code section in external memory
.shared_dram	Data section in external memory
.heap_dram	Heap section in external memory

5.6 Memory Management Examples

The Epiphany SDK gives the programmer complete control over data and code placement through section attributes that can be embedded in the source code. Memory management attributes placed in the source code will be ignored by the standard Linux GCC compiler.

The following examples illustrate some attributes that can be placed inside the source code or in a stub '*.c' file that gets compiled with the rest of the application source file. The general attribute should be placed outside the main routine.

1. How to specify the core where the executable will run:

```
asm(".global __core_row__;");
asm(".set __core_row__,0x20;");
asm(".global __core_col__;");
asm(".set __core_col__,0x24;");
```

2. How to specify where the stack should start:

```
asm(".global __stack_start_;");
asm(".set stack start ,0x1ff0;");
```

3. How to force memory placement of a static variable:

float data[N] __attribute__ ((section (".data_bank3")));

4. How to force memory placement of a function in declaration:

int my_fft(int *ptr) __attribute__ ((section (".text_bank0")))

5. How to force a long jump attribute on a function situated in external SDRAM:

int dump_memory(int *ptr) __attribute ((long call));

6. ELF Utilities

6.1 Overview

The Epiphany SDK includes several utilities that can be used to effectively manipulate binary object files. This chapter provides a brief overview of these utilities.

6.2 Utility Summary

Table 6.1 explains the major binary manipulation utilities within the Epiphany SDK and their respective arguments. All utilities use the --help switch to print out a complete set of arguments.

Utility	Note	Usage + Arguments
e-ar	Creates and	-r Replace existing or insert new files into archive
	manipulates archive	
	content	
e-nm	Lists the symbols in an	
	object file	
e-objcopy	Copies a binary file,	e-objcopy [options] in-file [out-file]
	possibly transforming	-S Remove all symbol and relocation information
	it in the process	-g Remove all debugging information
		srec-forceS3 Generate srec type output
		gap-fill <val> Fill gaps between sections with <val></val></val>
		set-start <addr> Set the start address to <addr></addr></addr>
		-W <name> Force <name> symbol to be marked weak</name></name>
		strip-unneeded Remove all unneeded symbols
		prefix-sections <prefix> Add prefix to section names</prefix>
		prefix-symbols <prefix> Add prefix to symbol names</prefix>
e-objdump	Displays information	e-objdump [options] file
	about the content of	-x Display the contents of all headers
	object files	-d Display content of all executable sections
		-D Display content of all sections
		-t Display content of of the symbol tabe
		-T Display content of dynamic symbol table
		-r Display relocation entries in file
		section=NAME Only display section NAME
e-size	Lists the section sizes	e-size [options] file
	within an object file	-o -d -x Display numbers in octal, decimal, or hex
e-strip	Strips symbols from	e-strip [options] file
	object files	remove-section= <name> Remove section <name></name></name>
		-g Remove all debug symbols and sections
		-s Remove all symbols and relocation information
		-o <file> Place stripped output into <file></file></file>

 Table 6.1 ELF Manipulation Programs

7. Instruction Set Simulator (E-RUN)

7.1 Overview

The Epiphany Instruction Set Simulator (ISS) is an accurate and fast functional representation of the Epiphany Instruction Set Architecture. The simulator accurately models the instruction set and register map of a single Epiphany core, but does not model pipeline behavior or any of the non-CPU hardware mechanisms such as the eMesh Network-On-Chip, DMA, or timers. The simulator runs in a host Linux environment, takes a binary ELF file as an input and supports standard I/O. To simplify program debugging and profiling, the simulator supports outputting program traces.

7.2 Simple Example

The following example shows how to simulate the execution of an Epiphany elf executable using the ISS within a Linux host platform.

```
$ e-run hello_world.elf
```

The simulator will print out "Hello World!"

To get an instruction trace of the executed program, use the '-t' option before the hello_world.elf argument as follows:

```
$ e-run -t hello_world.elf
```

7.3 Command Line Options

Note that the elf file should be the last argument given at the command line.

Option	Function
-t,trace	Output simulated instruction trace to scree
memory-region ADDRESS,SIZE	Defines a memory region as valid for simulator.
	Default is to allow $0x0 \rightarrow 1MB$
help	Prints help

 Table 7.1: Simulator Command Line Options

8. Hardware Connection Server (E-SERVER)

8.1 Overview

The GDB client runs on the Linux host machine and communicates with the Epiphany GDB server using GDB's internal RSP (remote serial protocol) over TCP/IP ports. The e-server responds to the GDB client or Loader requests and controls the hardware or hardware emulation model. Each core in the system needs a separate GDB client and connects to the GDB server using a unique TCP/IP port. By default cores connect to the e-server starting at port 51000. The e-server responds to the e-loader requests in the dedicated port.

An illustration of the GDB server/client operations is shown below:



Figure 8.1: The eServer Client-Target Connection Concept

8.2 Simple Example

To start the Target Server open a terminal window and type the following in the command line:

\$ e-server -hdf \${EPIPHANY HOME}/bsps/zedboard/zed E16G3 512mb.xml

The debug server now responds with status messages regarding the connection process and the results of the memory test, if performed. The output should be similar to the following:

```
Using the HDF file: zed_E16G3_512mb.xml
Listening for RSP on port 51000
Listening for RSP on port 51001
Listening for RSP on port 51002
Listening for RSP on port 51004
Listening for RSP on port 51005
:
Listening for RSP on port 51006
Listening for RSP on port 51007
Listening for RSP on port 51010
Listening for RSP on port 51009
Listening for RSP on port 51011
```

8.3 Command Line Options

Argument	Note
-hdf <i>file</i>	Mandatory argument, specifies the platform specific description
	file containing platform definitions, normally located in the
	esdk/bsps/{platform} directory
-p <port_base></port_base>	Assign base socket port number for the server. The default is
	51000
show-memory-map	Print out the supported memory map
test-memory	Test the memory before serving the debugger clients (*only for select platforms)
-Wpl <options></options>	Pass comma-separated <options> on to the platform driver</options>
-Xpl <arg></arg>	Pass <arg> on to the platform driver</arg>
version	Display the version number and copyright info

Table 8.1: eServer Command Line Options

8.4 Target Server Connection API

The run-time connection from a host to the epiphany target is performed via the eHAL library. For documentation on this library, see chapter 14 of this book, *"Epiphany Host Library (eHAL)"*.

9. Debugger (E-GDB)

9.1 Overview

The Epiphany debugger (e-gdb) is based on the popular GNU GDB debugger. It allows the programmer to see what is going on inside a program while it executes. Some of the powerful debug features enabled by the debugger include:

- Interactive program load
- Stopping program on specific conditions (usually a breakpoint placed in source code)
- Examine complete state of machine and program once program has stopped.
- Continuing program one instruction at a time or until the next stop condition is met.

The Epiphany debugger supports program debugging using the functional simulator as a target or the hardware platform as a target using the 'e-server'. The only difference between the two modes of debugging is the argument specified with the 'target' command within the debugger client. The simulator only supports debugging programs running on a single Epiphany CPU core and is not multi-core aware.

Note: In order to enable program debugging, the compiler should be invoked with the –g option.

9.2 Simple Examples

The following example shows how to debug a simple "Hello World" program with the Epiphany instruction set simulator.

In a Linux shell, start an e-gdb session using your executable.

```
$ e-gdb hello world.elf
```

Inside e-gdb, connect to the instruction set simulator debugging target.

```
(gdb) target sim
```

Load the program to the core memory.

(gdb) load

Place a breakpoint at the main function entry point.

(gdb) b main

Run the functional simulator.

(gdb) run

Continue program execution from breakpoint.

(gdb) c

Program then runs until completion and displays.

"Hello World!"

Exit debugger

(gdb) q

The following example shows how to debug a program running on an Epiphany based hardware target.

Make sure that a connection has been established with the hardware using the e-server program:

\$ e-server -hdf \${EPIPHANY_HOME}/bsps/emek3/emek3.xml -test-memory

In a Linux shell, start a e-gdb session using your executable (same as for the simulator).

```
$ e-gdb hello_world.elf
```

Inside e-gdb, connect to the TCP/IP socket connected to core that you want to debug.

```
(gdb) target remote:51000
```

Load the program the core memory.

(gdb) load

Place a breakpoint at the main function entry point.

(gdb) b main

Continue program execution from breakpoint.

(gdb) c

Program then runs until completion and displays.

"Hello World!"

Exit debugger

(gdb) q

9.3 Command Line Options

Invoke the debugger by running the program 'e-gdb'. Once started, 'e-gdb' reads commands from the terminal until you tell it to exit. You can also run 'e-gdb' with a variety of arguments and options, to specify more of your debugging environment at the outset.

The most common way to start 'e-gdb' is to simply specify the program as the only argument: \$ e-gdb program.elf

Option	Function
-x file	Execute gdb commands from file <i>file</i> .
-d directory	Add <i>directory</i> to the path to search for source files.
-quiet q -silent	"Quiet". Do not print the introductory and copyright messages.
-batch	Run in batch mode. Exit with status 0 after processing all the command files specified with '-x' (and all commands from initialization files, if not inhibited with '-n'). Exit with nonzero status if an error occurs in executing the gdb commands in the command files.
-nowindows -nw	"No windows".
-windows -w	If gdb includes a GUI, then this option requires it to be used if possible.
-async	Use the asynchronous event loop for the command-line interface. gdb processes all events, such as user keyboard input, via a special event loop.
-version	This option causes gdb to print its version number and exit

Table 9.1: Debugger Command Line Options

9.4 Quitting GDB

To quit 'e-gdb', enter 'q' or 'quit' at the 'e-gdb' command line. An interrupt (often *Ctrl-C*) does not exit from 'e-gdb', but rather terminates the action of any 'e-gdb' command that is in progress and returns to the 'e-gdb' command level.

9.5 Shell I/O

If you need to execute occasional shell commands during your debugging session, there is no need to leave or suspend e-gdb. You can just use the shell command:

```
shell command string
```

You may want to save the output of e-gdb commands to a file. There are several commands To control e-gdb's logging, use:

```
set logging [on/off]
```

To control name of current logfile:

```
set logging file
```

To overwrite existing logfile instead of appending:

```
set logging overwrite [on|off]
```

To specify that log should only go to file:

```
set logging redirect [on|off]
```

9.6 Getting Help

You can use help (abbreviated h) with no arguments to display a short list of named classes of Commands.

9.7 Command Syntax

An e-gdb command is a single line of input. There is no limit on how long it can be. It starts with a command name, which is followed by arguments whose meaning depends on the command name. Any text from "#" to the end of the line is a comment, which can be useful in command files.

9.8 Command Summary

Command	Function
info	Give information about specific keyword
breakpoint	Sets a breakpoint.
break function	Sets a breakpoint at entry to function
break -offset break +offset	Sets a breakpoint some lines forward or back from position
break linenum	Set a breakpoint at line <i>linenum</i> in the current source file. The
	current source file is the last file whose source text was printed.
break filename:linenum	Set a breakpoint at line <i>linenum</i> in source file <i>filename</i> .
break filename:function	Set a breakpoint at line <i>linenum</i> in source file <i>filename</i> .
break *address	Set a breakpoint at address <i>address</i> .
break	When called without any arguments, break sets a breakpoint at
	the next instruction to be executed in the selected stack frame
info breakpoints [n]	Print a table of all breakpoints, watchpoints, and catchpoints set
info break [<i>n</i>]	and not deleted, with the following columns for each breakpoint:
info watchpoints [n]	
watch expr	Set a watchpoint for an expression.
clear	Delete any breakpoints at the next instruction to be executed in
	the selected stack frame
clear function	Delete any breakpoints set at entry to the function <i>function</i> .
clear filename:function	
clear <i>linenum</i>	Delete any breakpoints set at or within the code of the specified
clear filename:linenum	line.
delete [breakpoints]	Delete the breakpoints, watchpoints, or catchpoints of the
[range]	breakpoint ranges specified as arguments. If no argument is
	specified, delete all breakpoints
disable [breakpoints]	Disable the specified breakpoints—or all breakpoints, if none are
[range]	listed. A disabled breakpoint has no effect but is not forgotten.
enable [breakpoints]	Enable the specified breakpoints (or all defined breakpoints).
[range]	They become effective once again in stopping your program.
continue [<i>ignore-count</i>]	Resume program execution, at the address where your program
c [ignore-count]	last stopped; any breakpoints set at that address are bypassed. The
fg [ignore-count]	optional argument <i>ignore-count</i> allows you to specify a further
	number of times to ignore a breakpoint at this location; its effect
	is like that of ignore
step	Continue running your program until control reaches a different
	source line, then stop it and return control to gdb. <i>Warning:</i> If
	you use the step command while control is within a function that
	was compiled without debugging information, execution proceeds
	until control reaches a function that does have debugging
	information. Likewise, it will not step into a function which is
	complied without debugging information. To step through
	inctions without debugging information, use the stepi command,
aton a such	Continue muning as in step, but do not state to the state of the state
step <i>count</i>	Conunue running as in step, but do so <i>count</i> times.

Table 9.2: Debugger Commands

next [count]	Continue to the next source line in the current (innermost) stack
	frame. This is similar to step, but function calls that appear within
	the line of code are executed without stopping.
set step-mode on	The set step-mode on command causes the step command to stop
	at the first instruction of a function which contains no debug line
	information rather than stepping over it.
set step-mode off	Causes the step command to step over any functions which
	contains no debug information. This is the default.
finish	Continue running until just after function in the selected stack
	frame returns.
until	Continue running until a source line past the current line, in the
	current stack frame, is reached. This command is used to avoid
	single stepping through a loop more than once.
steni	Execute one machine instruction, then stop and return to the
stepi arg	debugger
si	
nexti	Execute one machine instruction, but if it is a function call
nexti arg	proceed until the function returns
ni	
handle signal keywords	The keywords allowed by the handle command can be
nancie signat keywords	abbreviated. Their full names are:
	noston add should not ston your program when this signal
	homong. It may still print a massage talling you that the signal
	has some in
	has come m.
	This implies the print between as well print adh should print a
	This implies the print keyword as well, print gdb should print a
	message when this signal happens, hopfing god should not
	mention the occurrence of the signal at all. This implies the
	nostop keyword as well. Pass noignore gdb should allow your
	program to see this signal; your program can handle the signal, or
	else it may terminate if the signal is fatal and not handled. pass
	and noignore are synonyms. Nopass ignore gdb should not allow
	your program to see this signal. nopass and ignore are synonyms.
b	Print a backtrace of the entire stack: one line per frame for all
backtrace	frames in the stack.
backtrace n	Similar, but print only the innermost n frames.
bt n	
frame n	Select frame number n. Recall that frame zero is the innermost
f n	(currently executing) frame, frame one is the frame that called the
	innermost one, and so on. The highest-numbered frame is the one
	for main.
list linenum	Print lines centered around line number linenum in the current
	source file.
set listsize count	Make the list command display count source lines
list first,last	Print lines from first to last.
disassemble	This specialized command dumps a range of memory as machine
disassemble /m	instructions. It can also print mixed source + disassembly by
disassemble /r	specifying the /m modifier and print the raw instructions in hex as

	well as in symbolic form by specifying the /r. The default
	memory range is the function surrounding the program counter of
	the selected frame.
print expr	expr is an expression (in the source language). By default the
print /f expr	value of expr is printed in a format appropriate to its data type:
x/nfu addr	Use the x command to examine memory n f and u are all
x addr	optional parameters that specify how much memory to display
x dddi	and how to format it: addr is an expression giving the address
Λ	where you want to start displaying memory. If you use defaults
	for f_{1} you need not type the slash '/' For example 'y/3uh
	0x54320 is a request to display three halfwords (h) of memory
	formatted as unsigned decimal integers ((u)) starting at address
	0x5/320 All the defaults for the arguments to x are designed to
	make it easy to continue scanning memory with minimal
	make it easy to continue scanning memory with minimal
	specifications each time you use x. For example, after you have
	Inspected three machine instructions with $x/31$ addi , you can
	Inspect the next seven with just $x/7$.
compare-sections	Compare the data of a loadable section section-name in the
[section-name]	executable file of the program being debugged with the same
	section in the remote machine's memory, and report any
1. 1	mismatches.
display expr	Add the expression expr to the list of expressions to display each
	time your program stops.
\$_	The variable \$_ is automatically set by the x command to the last
	address examined
info all-registers	Print the names and values of all registers including floating-point
	and vector registers (in the selected stack frame).
info registers regname	Print the relativized value of each specified register regname.
	There are four standard registers in GDB: pc,sp,fp,ps(status).
	Whenever possible, these four standard register names are
	available on your machine even though the machine has different
	canonical mnemonics, so long as there is no conflict.
info mem	Print a table of all defined memory regions, with the following
	columns for each region:
find [/sn] start_addr, +len,	Search memory for the sequence of bytes specified by val1, val2,
val1 [, val2,]	etc. The search begins at address start addr and continues for
find [/sn] start_addr,	either len bytes or through to end addr inclusive.
end_addr, val1 [, val2,]	
set var symb=lvalue	Setting a symbol value from GDB
jump linespec	Resume execution at line linespec or at address given by location.
jump location	Execution stops again immediately if there is a breakpoint there.
target remote host:port	Debug using a TCP connection to port on host. The host may be
target remote tcp:host:port	either a host name or a numeric ip address; port must be a
	decimal number. The host could be the target machine itself, if it
	is directly connected to the net, or it might be a terminal server
	which in turn has a serial line to the target.
target sim	Builtin Epiphany CPU simulator.

set debug monitor	Enable or disable display of communications messages between the debugger and the remote monitor.
detach	When you have finished debugging the remote program, you can use the detach command to release it from debugger control.
disconnect	The disconnect command behaves like detach, except that the target is generally not resumed.

9.9 Epiphany GDB Limitations

The Epiphany implementation of GDB currently lacks support for:

- 1. Tracing
- 2. Hardware assisted watchpoints

10. Epiphany SDK Utilities (E-UTILS)

10.1 Overview

The Epiphany SDK is provided with a group of command-line utility programs. These programs are used to perform Epiphany system related tasks during program development and debugging. The e-utils programs include:

```
e-reset
e-loader
e-read
e-write
e-hw-rev
```

10.2 Reset Utility (E-RESET)

The Epiphany reset utility (e-reset) is used to reset the Epiphany subsystem, in case it gets stuck due to some unstable situation, or in order to bring it to a known state.

10.2.1 Example

At the command prompt, type:

\$ e-reset

10.3 Loader Utility (E-LOADER)

The Epiphany loader (e-loader) is responsible for loading programs onto the hardware platform. The input to the loader is a compiled and linked Epiphany program, that was generated by e-gcc/e-ld. Currently, the loader supports binary images formatted as a text file with a standard S-record (known as SREC) file format. This format is an ASCII hexadecimal ("hex") text encoding for binary data. The S-record is an output of the binary utility 'e-objcopy'.

When loading a binary image on the chip there is a need to translate the internal core addresses to global space addresses. During compile time, the build tools do not know what core will be the target of the executable. This information is known only at load time. Thus, the insertion of the core ID data has to be done prior to sending the SREC file to the e-loader. When loading images of more than one core, each partial SREC has to be pre-processed separately.

10.3.1 Command Line Options

e-loader [-s|--start] [-r|--reset] <e-program> [row col [rows cols]]

Option	Function
-r,reset	Perform a full hardware reset of the Epiphany platform before
	loading the program.
-s,start	With this option set, the loaded programs are started after they
	have finished loading on all cores in workgroup.
<e-program></e-program>	Path to the program image to load onto the core workgroup.
row, col	Absolute coordinates of first core in workgroup to be loaded. The
	default values are the platform's first physical core.
rows, cols	Size of cores workgroup to be loaded. The default values are (1,1)
-h,help	Display a help message.

Table 10.1: Loader Command Line Options

10.3.2 Example

After building an Epiphany elf program, translate from elf to S-record program load format:

```
$ e-objcopy --srec-forceS3 --output-target srec main1.elf main1.srec
```

Load program onto the target, on a 4×4 block of cores starting at core 0×808 (32,8) and start it immediately after:

```
$ e-loader --start main.srec 32 8 4 4
```

Or, perform a system reset and load the program onto a single core at the chip's origin. Then wait for host command to start the program.

```
$ e-loader --reset main.srec
```

10.4 Memory Read Utility (E-READ)

The Epiphany memory read utility (e-read) is used to read words from memory locations on the Epiphany chip(s) or the External Memory.

10.4.1 Command Line Options

e-read [-v|-r] <row> [<col>] <address> [<num-words>]

Option	Function
<row></row>	Row coordinate of the target core. To read data from External
	Memory, enter -1.
	The core coordinates are relative to the platform's chip bounding box. That is, all of the Epiphany chips are considered one workgroup, where the first core of the first chip is at coordinates $(0,0)$.
[<col/>]	Row coordinate of the target core. When reading from External Memory, this parameter is omitted.
<address></address>	The start address of the read data. Address is given as local space when reading from a core memory, or as an offset from the platform's External Memory base. Address should be in hexadecimal format and is rounded down to the word (4-bytes) alignment.
[<num-words>]</num-words>	Number of words to read from the target, starting at <address>. If this parameter is omitted, a single word is read.</address>
[-v]	Verbose mode - print more information.
[-r]	Raw mode - print only the memory contents.

 Table 10.2: e-read Command Line Options

10.4.2 Example

The following command will read the STATUS register of the 3^{rd} core in the 1^{st} row (0,2):

\$ e-read 0 2 0xf0404

The following command will read 16 words from the External Memory, starting at offset 0x4000:

```
$ e-read -1 0x4000 16
```

10.5 Memory Write Utility (E-WRITE)

The Epiphany memory write utility (e-write) is used to write words to memory locations on the Epiphany chip(s) or the External Memory.

10.5.1 Command Line Options

e-write [-v] <row> [<col>] <address> [<val0> <val1> ...]

Option	Function
<row></row>	Row coordinate of the target core. To read data from External
	Memory, enter -1.
	The core coordinates are relative to the platform's chip bounding box. That is, all of the Epiphany chips are considered one workgroup, where the first core of the first chip is at coordinates (0,0).
[<col/>]	Row coordinate of the target core. When reading from External Memory, this parameter is omitted.
<address></address>	The start address of the read data. Address is given as local space when reading from a core memory, or as an offset from the platform's External Memory base. Address should be in hexadecimal format and is rounded down to the word (4-bytes) alignment.
[<val0> <val1>]</val1></val0>	Number of words to write to the target, starting at <address>. If</address>

 Table 10.3: e-write Command Line Options

	this parameter is omitted, the input is taken in interactive mode
	entered. Values are entered as 32-bit hexadecimal numbers.
[-v]	Verbose mode - print more information.

10.5.2 Example

The following command will program the CONFIG register of the 3^{rd} core in the 1^{st} row (0,2) such that the core works in the "truncate" rounding mode:

```
$ e-write 0 2 0xf0400 0x1
```

The following command will write the first eight elements of the Fibonacci Series to a buffer in the External Memory, starting at offset 0x120:

\$ e-write -1 0x120 1 1 2 3 5 8 d 15

10.6 Hardware Revision Utility (E-HW-REV)

The hardware revision utility (e-hw-rev) returns the current revision number of the Epiphany subsystem programmed logic.

10.6.1 Example

At the command prompt, type:

\$ e-hw-rev

11. Standard Library Support

11.1 Overview

The Epiphany SDK includes a set of libraries based on the newlib distribution of Standard C and Standard Math libraries. These libraries are bundled with the e-gcc compiler. Usage of these libraries does not require the use of the –L switch for specifying library location search path.

11.2 Standard C Libraries

Table 11.1 shows the key components within the Standard C library, with complete support for file I/O. For a complete explanation of the C functions, please refer to the newlib manual at: <u>http://sourceware.org/newlib/libc.html</u>

Library	Function
<stdlib.h></stdlib.h>	Standard utility functions
<ctype.h></ctype.h>	Character classification macros
<stdio.h></stdio.h>	Input/output functions
<strings.h></strings.h>	String handling functions
<signals.h></signals.h>	Event handling

Table 11.1: Key Standard C Library Components

The Standard C Library functions are reentrant whenever possible.

11.3 Standard Math Library (math.h)

The Standard Math library is based on the newlib math library (libm). The complete newlib math library reference manual can be located at: <u>http://sourceware.org/newlib/libm.html</u>

Alternative declarations of the mathematical functions, which exploit specific machine capabilities to operate faster—but generally have less error checking and may reflect additional limitations on some machines—are available when you include fastmath.h instead of math.h.

When a libm function detects an exceptional case, errno may be set, the matherr() function may be called, and an error message may be written to the standard error stream. This behavior may not be reentrant.

12. Epiphany System Programming Model

When programming an application for the Epiphany system, a few parallel programming models are applicable. The Epiphany Run-Time library and Host library are designed to support programming in the relocateable core workgroup model.

The Epiphany platform is comprised of the Epiphany chip arrangement and External Memory. Individual eCores are referenced in a context of Workgroups. External Memory regions are addressed relative to the External Memory region base. The physical allocation of the Epiphany chips and External Memory are defined in the provided Hardware Description File (HDF). This way, an application can be easily migrated between platforms where the location of physical chips and External Memory differ.

A Workgroup is a collection of adjacent eCores on the Epiphany chip(s), normally intended for the parallel execution of a computational task. The workgroup is rectangular and its size and origin are defined at run-time by the host. Its parameters are set by a host library function and are maintained in a workgroup object.

The collection of chips in the Epiphany system form a rectangular area, which is the minimal bounding box including all the physical chips in the platform. A workgroup is defined in terms of its row and column coordinates relative to this bounding box, and its size in terms of number of rows and columns of cores. Thus, the first core of the first chip is defined as located at coordinates (0, 0). For example, consider a system comprised of 4 Epiphany-16 (E16) chips arranged in two rows containing two chips each. A workgroup of size 2 by 2 cores, originating at the 4th row and 6th column will have the following parameters: (row, col, rows, cols) = (3, 5, 2, 2).

An eCore member of the workgroup is referenced in terms of its row and column coordinates relative to the workgroup's origin. Thus, the first core in the workgroup is at coordinates (0, 0).

An example of coordinates and references designation can be seen in Figure 12.1.


Figure 12.1: Platform, Workgroup and eCore coordinates

Here the platform is comprised of two adjacent E16 chips, one is located at coordinates (32, 8) and the other at (32, 12). The Platform's total size is 4 by 8 cores. A Workgroup of size 2 by 3 is defined starting at core (34, 9). Hence, its relative position is (2, 1). The 3^{rd} eCore on the workgroup's 1^{st} row has CoreID 0x88b, which is at absolute coordinates (34, 11). Hence, its relative coordinates are (0, 2).

13. Epiphany Hardware Utility Library (eLib)

13.1 Overview

The Epiphany Hardware Utility library provides functions for configuring and querying the Epiphany hardware resources. These routines automate many common programming tasks that are not provided by the C and C++ languages and are specific to the Epiphany architecture.

In the following sections, the various eLib functions are described. Each section provides details on a family of APIs. The master header file for the eLib, which includes all the per-family headers, is the "e-lib.h" header file. Include this header file at the beginning of a program that uses the eLib functions and objects.

```
#include ``e-lib.h"
```

In order to use this library to build an Epiphany program, use the e-gcc compiler option -le-lib on the build command line.

Each core on the platform is referenced via a definition of a workgroup. Two global objects are available at each core's space. One object, called e_group_config, contains the information about the chip type, the workgroup's position and size, and the core's position in the containing workgroup. Its members are:

```
e_group_config.chiptype - Type of chip containing the core
e_group_config.group_id - CoreID of first core in Workgroup
e_group_config.group_row - Origin of Workgroup
e_group_config.group_col
e_group_config.group_rows - Size of Workgroup
e_group_config.group_cols
e_group_config.core_row - Coordinates of core
e group config.core col
```

The other object, called e_emem_config, contains information about the External Memory base address. Its member is:

```
e_emem_config.base - Absolute address of base of ext. mem.
```

In addition to the function prototypes and specific type enumerations, the following definitions are provided: Two macro shortcuts for the "align", "packed" and "section" function and variable attributes are defined as:

```
#define ALIGN(x) __attribute__ ((aligned (x)))
#define PACKED __attribute__ ((packed))
#define SECTION(x) __attribute__ ((section (x)))
```

The e_bool_t type is defined as follows:

```
typedef enum {
    E_FALSE,
    E_TRUE,
} e_bool_t;
```

The e_return_stat_t type defined the eLib functions return values:

```
typedef enum {
    E_OK,
    E_ERR,
    E_WARN,
} e return stat t;
```

13.2 System Register Access Functions

13.2.1 Overview

The system register access functions enable the reading from and writing to the hardware special registers.

Functions definition summary

```
unsigned e_reg_read(e_reg_id_t reg_id);
void e reg write(e reg id t reg id, unsigned val);
```

Enumerated constants and macros

```
// General Purpose Registers
typedef enum
{
    E REG RO, E REG R8,
                                 E REG R16,
                                                E REG R24,
    E_REG_R1,E_REG_R9,E_REG_R17,E_REG_R25,E_REG_R2,E_REG_R10,E_REG_R18,E_REG_R26,E_REG_R3,E_REG_R11,E_REG_R19,E_REG_R27,E_REG_R4,E_REG_R12,E_REG_R20,E_REG_R28,E_REG_R5,E_REG_R13,E_REG_R21,E_REG_R29,E_REG_R6,E_REG_R14,E_REG_R22,E_REG_R30,
    E REG R1,
                  E REG R9,
                                 E REG R17,
                                                  E REG R25,
                  E REG R15,
    E REG R7,
                                 E REG R23,
                                                   E REG R31,
    E REG R32, E REG R40,
                                 E REG R48,
                                                  E REG R56,
    E REG R33, E REG R41, E REG R49,
                                                  E REG R57,
                                                  E REG R58,
    E REG R34, E REG R42, E REG R50,
                                 E_REG_R51,
    E_REG_R35, E_REG_R43,
                                                  E REG R59,
    E REG R36, E REG R44, E REG R52,
                                                  E REG R60,
    E REG R37, E REG R45, E REG R53,
                                                  E REG R61,
                 E_REG_R46,
                                 E REG R54,
    E REG R38,
                                                  E REG R62,
    E REG R39, E REG R47,
                                 E REG R55,
                                                   E REG R63,
} e gp reg id t;
// eCore Special Registers
typedef enum
{
    // Control Registers
    E REG CONFIG,
                                   E REG IRET,
    E REG STATUS,
                                 E REG IMASK,
    E REG FSTATUS,
                                 E REG ILAT,
    E REG PC,
                                  E REG ILATST,
    E REG DEBUGSTATUS,
                                 E REG ILATCL,
    E REG DEBUGCMD,
                                  E REG IPEND,
```

```
E REG LC,
    E REG LS,
    E REG LE,
    // DMA registers
                             E_REG_DMA1CONFIG,
E_REG_DMA1STRIDE,
    E REG DMA0CONFIG,
    E REG DMA0STRIDE,
    E REG DMAOCOUNT,
                              E REG DMA1COUNT,
                              E REG DMA1SRCADDR,
    E REG DMA0SRCADDR,
                            E_REG_DMA1DSTADDR,
E_REG_DMA1AUTODMA0,
    E REG DMAODSTADDR,
    E REG DMA0AUTODMA0,
    E REG DMA0AUTODMA1,
                              E REG DMA1AUTODMA1,
    E REG DMAOSTATUS,
                               E REG DMA1STATUS,
    // Event Timer Registers
    E REG CTIMER0,
                                E REG CTIMER1,
    // Processor Control Registers
    E REG MEMPROTECT,
    E REG MESHCFG,
    E REG COREID,
    E REG CORE RESET,
} e core reg id t;
// Chip Registers
typedef enum
{
    E REG IO LINK MODE CFG,
    E REG IO LINK TX CFG,
    E REG IO LINK RX CFG,
    E REG IO LINK DEBUG,
    E REG IO GPIO CFG,
    E REG IO FLAG CFG,
    E REG IO SYNC CFG,
    E REG IO HALT CFG,
    E REG IO RESET,
} e_chip_reg_id_t;
```

13.2.2 e_reg_read()

Synopsis

```
#include ``e-lib.h"
unsigned e_reg_read(e_core_reg_id_t reg_id);
```

Description

Reads value from one of the system registers within the caller core.

Return value

Return the current value read from one of the system registers as identified by reg id.

13.2.3 e_reg_write()

Synopsis

```
#include ``e-lib.h"
void e_reg_write(e_core_reg_id_t reg_id, unsigned val);
```

Description

Set the value of the system register identified by reg_id within the caller core, to val.

Return value

13.3 Interrupt Service Functions

13.3.1 Overview

The Interrupt Service functions handle system interrupt control and generation. It is possible to generate interrupts in the local core or in a remote core.

Functions definition summary

```
void e_irq_attach(e_irq_type_t irq, sighandler_t handler);
void e_irq_global_mask(e_bool_t state);
void e_irq_mask(e_irq_type_t irq, e_bool_t state);
void e_irq_set(unsigned row, unsigned col, e_irq_type_t irq);
void e irq clear(unsigned row, unsigned col, e irq type t irq);
```

Enumerated constants, macros and types

```
typedef void (*sighandler_t)(int);
typedef enum
{
    E_SYNC,
    E_SW_EXCEPTION,
    E_MEM_FAULT,
    E_TIMER0_INT,
    E_TIMER1_INT,
    E_MESSAGE_INT,
    E_DMA0_INT,
    E_DMA1_INT,
    E_USER_INT,
} e_irq_type_t
```

13.3.2 e_irq_attach()

Synopsis

```
#include ``e-lib.h"
void e_irq_attach(e_irq_type_t irq, sighandler_t handler);
```

Description

This function attaches (registers) an interrupt handler function (ISR), given by handler, to a specific entry in the IVT (Interrupt Vector Table), specified by irq.

Using this function, ISR for a specific event type can be assigned and replaced in run-time. It uses an indirect handler attachment, which may impose a slight delay on the execution of the handler in case of an event.

The ISR should be compiled using the interrupt function attribute in order to apply proper entry and exit sequences, guaranteeing safe context switching.

Note that the sighandler_t ISR prototype contains an integer argument. Generally, this argument is intended for passing the interrupt type (irq parameter) to the handler, enabling the sharing of the same handler among several interrupt types, and identifying the specific generating event during the ISR processing. For example, it allows sharing the handler for DMA0 and DMA1, taking proper action depending on the specific generating DMA. However, when attaching an ISR to the interrupt using the e_irq_attach() function, this parameter is not populated upon interrupt invocation. If this parameter is required, use the signal() mechanism instead.

Return value

13.3.3 e_irq_global_mask()

Synopsis

```
#include ``e-lib.h"
void e_irq_global_mask(e_bool_t state);
```

Description

Globally enable or disable interrupts on caller core. When state is E_TRUE, the GID bit of the core's STATUS register is set and consequent interrupt events are masked. When state is E_FALSE, the GID bit is cleared and consequent interrupt events are tested against the other masking mechanisms and pending interrupts.

Return value

13.3.4 e_irq_mask()

Synopsis

```
#include "e-lib.h"
void e_irq_mask(e_irq_type_t irq, e_bool_t state);
```

Description

Disable or enables a single interrupt event type, specified by irq, by setting its respective bit in the core's IMASK register according to state. If state is E_TRUE, then consequent interrupt events of type irq are masked. If state is E_FALSE, this interrupt type is not masked.

Return value

13.3.5 e_irq_set()

Synopsis

```
#include "e-lib.h"
void e_irq_set(unsigned row, unsigned col, e_irq_type_t irq);
```

Description

Generate an interrupt event by setting its ILAT register bit specified by irq. The event is generated on the core with relative coordinates (row, col) in a core workgroup.

Return value

13.3.6 e_irq_clear()

Synopsis

```
#include ``e-lib.h"
void e_irq_clear(unsigned row, unsigned col, e_irq_type_t irq);
```

Description

Clears pending interrupt request by clearing its ILAT register bit specified by irq. The request is cleared from the core with relative coordinates (row, col) in a core workgroup.

Return value

13.4.1 Overview

The Timer functions interface the system timers (two per core) and the read, write and manipulation of their operation.

Functions definition summary

```
unsigned e_ctimer_get(e_ctimer_id_t timerid);
unsigned e_ctimer_set(e_ctimer_id_t timerid, unsigned val);
unsigned e_ctimer_start(e_ctimer_id_t timerid,
        e_ctimer_config_t config);
unsigned e_ctimer_stop(e_ctimer_id_t timerid);
void e_wait(e_ctimer_id_t timerid, unsigned clicks);
```

Enumerated constants and macros

```
typedef enum
{
    E CTIMER 0,
    E CTIMER 1,
} e ctimer id t;
typedef enum
{
    E CTIMER OFF,
    E CTIMER CLK,
    E CTIMER IDLE,
    E CTIMER IALU INST,
    E CTIMER FPU INST,
    E CTIMER DUAL INST,
    E CTIMER E1 STALLS,
    E CTIMER RA STALLS,
    E CTIMER EXT FETCH STALLS,
    E CTIMER EXT LOAD STALLS,
} e ctimer config t;
```

```
#define E_CTIMER_MAX
```

13.4.2 e_ctimer_get()

Synopsis

```
#include "e-lib.h"
unsigned e_ctimer_get(e_ctimer_id_t timerid);
```

Description

Read value of the core's timer specified by timerid. Note that the core counters decrement on events and stop counting at zero.

Return value

Returns the current value of timer timerid.

13.4.3 e_ctimer_set()

Synopsis

```
#include ``e-lib.h"
unsigned e_ctimer_set(e_ctimer_id_t timerid, unsigned val);
```

Description

Sets value of the core's timer specified by timerid to val. Note that the core counters decrement on events and stop counting at zero. Use E_CTIMER_MAX to set val to the maximum allowed value.

and the initial value of the ctimer count register to val. Note that the core counters decrement on events and stop counting at zero.

Return value

Returns the new value of timer timerid.

13.4.4 e_ctimer_start()

Synopsis

Description

Causes the ctimer specified by timerid to begin counting down upon events. The type of events to be counted is specified by config. The function sets the ctimer configuration field CTIMERXCFG in the core's CONFIG register to config.

Return value

Returns the current value of timer timerid.

13.4.5 e_ctimer_stop()

Synopsis

```
#include "e-lib.h"
unsigned e_ctimer_stop(unsigned timerid);
```

Description

Causes the ctimer specified with timerid to stop counting down by setting the ctimer configuration field CTIMERXCFG in the core's CONFIG register to E_CTIMER_OFF.

Return value

Returns the current value of the stopped timer.

13.4.6 e_wait()

Synopsis

```
#include ``e-lib.h"
void e wait(e ctimer id t timerid, unsigned clicks);
```

Description

Pauses the execution of the program for the number of clock cycles specified by clicks.

This function utilizes ctimer timerid for counting the clocks. Consequently, it will override whatever counting process is currently being performed by ctimer timerid. Make sure to store the old value before calling e_wait() if required later.

Note that as this function counts clock cycles, the actual time (wall-clock) depends on the clock rate of the Epiphany chip.

Return value

13.5 DMA and Data Movement Functions

13.5.1 Overview

The DMA functions control the two DMA channels included in each core. Functionality is provided for querying status, configuring and copying memory using the DMA engine.

Functions definition summary

```
void *e_read(void *remote, void *dst, unsigned row, unsigned col,
        const void *src, size_t bytes);
void *e_write(void *remote, const void *src, unsigned row,
        unsigned col, void *dst, size_t bytes);
int e_dma_copy(void *dst, void *src, size_t bytes);
int e_dma_start(e_dma_desc_t *descriptor, e_dma_id_t chan);
int e_dma_busy(e_dma_id_t chan);
void e_dma_wait(e_dma_id_t chan);
void e_dma_set_desc(e_dma_id_t chan,
        unsigned config, e_dma_desc_t *next_desc,
        unsigned stride_i_src, unsigned stride_i_dst,
        unsigned count_i, unsigned count_o,
        unsigned stride_o_src, unsigned stride_o_dst,
        void *addr_src, void *addr_dst, e_dma_desc_t *descriptor);
```

Enumerated constants, macros and types

```
typedef enum
{
    E DMA 0,
    E DMA 1
} e dma id t;
typedef struct
{
    unsigned config;
    unsigned inner stride;
    unsigned count;
    unsigned outer stride;
    void *src addr;
    void *dst addr;
} e dma desc t;
typedef enum
{
    E DMA ENABLE,
```

	E	DMA	MASTER,
	E	DMA	CHAIN,
	Е	DMA	STARTUP,
	Е	DMA	IRQEN,
	Е	DMA	BYTE,
	E	DMA	HWORD,
	Е	DMA	WORD,
	Е	DMA	DWORD,
	Ε	DMA	MSGMODE,
	E	DMA	SHIFT SRC IN,
	E	DMA	SHIFT_DST_IN,
	Е	DMA	SHIFT_SRC_OUT,
	Е	DMA	SHIFT_DST_OUT,
-	-1		

} e_dma_config_t;

13.5.2 e_read()

Synopsis

Description

Copy bytes bytes of data from a remote source src to a local destination dst. The remote source can be either a core on the caller core's workgroup, or an External Memory buffer. The remote parameter must be either e_group_config or e_emem_config, specifying the nature if the source.

If the remote parameter is e_group_config, then the source core is specified by its (row, col) coordinates in the caller core's workgroup. If the src address is a global address, then it is used unmodified.

If the remote parameter is e_emem_config, then the source address is given relative to the External Memory base address. In this case, the row and col parameters are ignored.

Return value

13.5.3 e_write()

Synopsis

Description

Copy bytes bytes of data from a local source src to a remote destination dst. The remote destination can be either a core on the caller core's workgroup, or an External Memory buffer. The remote parameter must be either e_group_config or e_emem_config, specifying the nature if the destination.

If the remote parameter is e_group_config, then the destination core is specified by its (row, col) coordinates in the caller core's workgroup. If the dst address is a global address, then it is used unmodified.

If the remote parameter is e_emem_config, then the destination address is given relative to the External Memory base address. In this case, the row and col parameters are ignored.

Return value

13.5.4 e_dma_copy()

Synopsis

```
#include ``e-lib.h"
int e_dma_copy(void *dst, void *src, size_t bytes);
```

Description

Copy bytes bytes of data from src to dst using the DMA engine DMA1. If the DMA channel is busy when calling this function, it waits until the previous transfer is concluded. After initiating the DMA transfer process it waits until the transfer is finished (blocking DMA).

This is generally a faster alternative to the standard memcpy() function. However, utilizing the DMA, it has some limitations that the standard function does not impose, like some restrictions on the source and destination addresses. Please consult the Epiphany Architecture Reference Manual for more details.

Return value

Returns 0 if successful.

13.5.5 e_dma_start()

Synopsis

#include ``e-lib.h"
int e_dma_start(e_dma_desc_t *descriptor, e_dma_id_t chan);

Description

Start a DMA on channel chan as described by the descriptor descriptor. Use the e_dma_desc_t constants to populate the descriptor descriptor fields.

Return value

Returns 0 if successful.

13.5.6 e_dma_busy()

Synopsis

#include "e-lib.h"
int e_dma_busy(e_dma_id_t chan);

Description

Queries the status of the state machine of dma channel chan.

Return value

Return 0 if the DMA channel identified by chan is idle, otherwise return DMA channel status.

13.5.7 e_dma_wait()

Synopsis

#include ``e-lib.h"
void e_dma_wait(e_dma_id_t chan);

Description

Halts the execution of the program and waits as long as DMA channel chan is busy.

Return value

Synopsis

```
#include ``e-lib.h"
void e_ dma_set_desc(e_dma_id_t chan,
    unsigned config, e_dma_desc_t *next_desc,
    unsigned stride_i_src, unsigned stride_i_dst,
    unsigned count_i, unsigned count_o,
    unsigned stride_o_src, unsigned stride_o_dst,
    void *addr_src, void *addr_dst, e_dma_desc_t *descriptor);
```

Description

Sets the DMA descriptor descriptor of DMA channel chan with the various members:

config	- 16-bit configuration field. This field is comprised of the Logical OR of the
	e_dma_config_t constants.
next_desc	- 16-bit address of DMA descriptor, loaded when current transfer ends, when
	E_DMA_CHAIN mode was set.
stride_i_src	- 16-bit stride of the inner loop of the source address generator.
stride_i_dst	- 16-bit stride of the inner loop of the destination address generator.
count_i	- 16-bit count of the inner loop transactions. This value must be positive.
count_o	- 16-bit count of the outer loop transactions. This value must be positive.
stride_o_src	- 16-bit stride of the outer loop of the source address generator.
stride_o_dst	- 16-bit stride of the outer loop of the destination address generator.
addr_src	- 32-bit start address of source data.
addr dst	- 32-bit start address of destination data.

Use this function to make sure that the DMA channel is idle when programming the descriptor.

Return value

13.6 Mutex and Barrier Functions

13.6.1 Overview

A mutex is an object which allows locking of a shared resource, enabling exclusive access to just one agent. When an access to the shared resource is required, first the associated mutex is checked. If the mutex is cleared, then resource is free. The mutex is then set and access is granted to the querying agent.

A barrier is a means for synchronizing parallel executing threads. When a program reaches a barrier, it will wait until all other threads reached the barrier as well. Only then will the program (and all the other programs) continue their execution.

Functions definition summary

```
void e_mutex_init(unsigned row, unsigned col, e_mutex_t *mutex,
    e_mutexattr_t *attr);
void e_mutex_lock(unsigned row, unsigned col, e_mutex_t *mutex);
unsigned e_mutex_trylock(unsigned row, unsigned col,
    e_mutex_t *mutex);
void e_mutex_unlock(unsigned row, unsigned col, e_mutex_t *mutex);
void e_barrier_init(volatile e_barrier_t bar_array[],
    e_barrier_t *tgt_bar_array[]);
void e_barrier(volatile e_barrier_t *bar_array,
    e_barrier_t *tgt_bar_array[]);
```

Enumerated constants, macros and types

typedef int e_mutex_t; typedef int e_mutexattr_t; typedef char e barrier t;

Synopsis

```
#include ``e-lib.h"
void e_mutex_init(unsigned row, unsigned col, e_mutex_t *mutex,
        e_mutexattr_t *attr);
```

Description

This function initializes the mutex referenced by mutex, on the core at coordinates (row, col) in the caller core's workgroup. Upon successful initialization, the state of the mutex becomes initialized and unlocked.

The initialization attribute, specified by attr, is reserved for future use. When calling the function, use NULL for attr.

Return value

Returns 0 upon successful initialization; otherwise, a nonzero error value is returned.

13.6.3 e_mutex_lock()

Synopsis

```
#include "e-lib.h"
void e_mutex_lock(unsigned row, unsigned col, e_mutex_t *mutex);
```

Description

This function tries to lock the mutex object referenced by mutex, on the core at coordinates (row, col) in the caller core's workgroup. If the mutex is already locked, the calling thread will be blocked until the mutex becomes available.

Return value

If successful, the function returns 0; otherwise, a nonzero error value is returned.

13.6.4 e_mutex_trylock()

Synopsis

```
#include ``e-lib.h"
unsigned e_mutex_trylock(unsigned row, unsigned col,
        e_mutex_t *mutex);
```

Description

This function tries to lock the mutex object referenced by mutex, on the core at coordinates (row, col) in the caller core's workgroup. If the mutex is already locked, the function returns with a failure code.

Return value

If successful, the function returns 0; otherwise, nonzero value is returned, which is the Core ID of the agent that holds the associated resource.

13.6.5 e_mutex_unlock()

Synopsis

```
#include ``e-lib.h"
void e_mutex_unlock(unsigned row, unsigned col, e_mutex_t *mutex);
```

Description

This function unlocks the mutex object referenced by mutex, on the core at coordinates (row, col) in the caller core's workgroup.

Return value

If successful, the function returns 0; otherwise, a nonzero error value is returned.

Synopsis

```
#include "e-lib.h"
void e_barrier_init(volatile e_barrier_t bar_array[],
        e_barrier_t *tgt_bar_array[]);
```

Description

Initialize a workgroup barrier. The bar_array and tgt_bar_array parameters are defined as arrays of size equal to the number of cores in the workgroup. The barrier is mutual to all cores in the workgroup, so care must be taken w

Return value

13.6.7 e_barrier()

Synopsis

```
#include ``e-lib.h"
void e_barrier(volatile e_barrier_t *bar_array,
        e_barrier_t *tgt_bar_array[]);
```

Description

Set a workgroup barrier point (a sync point) across the workgroup cores. When the program reaches the barrier point, it will halt and wait until all cores in the workgroup reached that point as well.

The bar_array and tgt_bar_array parameters are defined as arrays of size equal to the number of cores in the workgroup, and must be initialized by e_barrier_init().

The barrier is mutual to all cores in the workgroup, so care must be taken when placing the e barrier() call, to prevent deadlock conditions.

Return value
13.7 Core ID and Workgroup Functions

13.7.1 Overview

The Core ID is a number which identifies a core in the system. Each core is associated with a unique number that is related to the core's coordinates in the global mesh. The ID is a 12-bit number where the 6 high order bits are the core row coordinate and the 6 low order bits are the core column coordinates. This number also indicates the core's 1MB slice in the global memory space, where it comprises the most significant bits of the core's globally addressable space.

Functions definition summary

```
e_coreid_t e_get_coreid(void);
void *e_get_global_address(unsigned row, unsigned col,
        const void *ptr);
e_coreid_t e_coreid_from_coords(unsigned row, unsigned col);
void e_coords_from_coreid(e_coreid_t coreid, unsigned *row,
        unsigned *col);
e_bool_t e_is_on_core(const void *ptr);
void e_neighbor_id(e_coreid_wrap_t dir, e_coreid_wrap_t wrap,
        unsigned *row, unsigned *col);
```

Enumerated constants and macros

```
typedef unsigned int e_coreid_t;
#define E_SELF
typedef enum
{
    // neighboring cores wrap topology
    E_GROUP_WRAP, // all workgroup cores form a ring
    E_ROW_WRAP, // core rows form rings
    E_COL_WRAP, // core columns form rings
    // neighboring cores direction
    E_NEXT_CORE, // neighbor core with the next coreID
    E_PREV_CORE, // neighbor core with the prev coreID
} e_coreid_wrap_t
```

```
typedef enum {
    E E16G301,
    E E64G401,
} e_chiptype_t;
typedef struct {
    e_chiptype_t chiptype;
    e_coreid_t group_id;
    unsigned
                  group_row;
    unsigned
                   group col;
    unsigned group_col;
unsigned group_rows;
unsigned group_cols;
unsigned core_row;
unsigned core_row;
                 core_col;
    unsigned
    unsigned
                   alignment padding;
} e group config t;
typedef struct {
    unsigned base;
} e emem config t;
```

13.7.2 e_get_coreid()

Synopsis

#include ``e-lib.h"
e_coreid_t e_get_coreid(void);

Description

Reads coreid from the hardware register.

Return value

Returns a 12-bit coreid value, aligned to lsb of the result.

13.7.3 e_get_global_address ()

Synopsis

Description

Transforms a local pointer ptr into the matching address on a neighbor core, referred to by coordinates (row, col), in the caller core's workgroup.

Note that for ptr values that point to a global address not local to coreid, the function returns an unmodified version of ptr.

If either row or col are E_SELF , or they are equal to the caller core's own coordinates, then the function calculates the global version of the local address. That is, the returned address is the same address as would be referenced from outside of the core.

If ptr points to a global address (that is, its 12-bit msb's are nonzero), then it is returned unmodified.

Return value

Returns a 32-bit absolute global address.

13.7.4 e_coreid_from_coords()

Synopsis

```
#include ``e-lib.h"
e_coreid_t e_coreid_from_coords(unsigned row, unsigned col);
```

Description

Returns the coreid value of the neighbor core, referred to by coordinates (row, col), in the caller core's workgroup.

Return value

Returns 12-bit wide coreid value.

13.7.5 e_coords_from_coreid()

Synopsis

Description

Calculate the row and column coordinates (row, col) of the core specified by coreid, in the caller's workgroup.

Note that no check is made for a coreid value outside of the workgroup. In such case, the return coordinates may be either bigger than the workgroup's size or negative.

Return value

None.

13.7.6 e_is_oncore()

Synopsis

```
#include ``e-lib.h"
e_bool_t e_is_on_core(const void *ptr);
```

Description

This function checks whether an address (either global or local) is within the memory space of the caller core.

Return value

The function returns E_{FALSE} if the address is not in the caller's space. Otherwise, it returns E_{TRUE} .

13.7.7 e_neighbor_id()

Synopsis

Description

This function calculates the (row, col) coordinates of the neighboring core, according to a specified topology.

Cores can be logically chained in one linear string across the whole chip, from north-west core to south-east core in a raster scan fashion. The cores can also be chained in a row-wise fashion or column-wise fashion, such that rows or columns create parallel rings.

The dir argument (one of E_NEXT_CORE, E_PREV_CORE) specifies whether the next or previous cores in the chain are required. The function will always calculate the coordinates of another core on the same group, wrapping on a row, column, or workgroup boundary as specified by the wrap argument (one of E_ROW_WRAP, E_COL_WRAP, E_GROUP_WRAP). The calculated coordinates are returned in the row and col parameters.

This function is limited to workgroup dimensions (rows and columns) which are powers of 2, i.e., 2, 4, 8, etc.

Return value

None.

14. Epiphany Host Library (eHAL)

14.1 Overview

The Epiphany Hardware Abstraction Layer (eHAL) library provides functionality for communicating with the Epiphany chip when the application runs on a host. The host can be a PC or an embedded processor. The communication is performed using memory writes to and reads from shared buffers that the applications on both sides should define. The library interface is defined in the e-hal.h header file.

In order to use this library in your application, the compiler and linker must be configured with the paths to the header file and the library binary. In your tools options use the following configurations:

```
$ gcc -I${EPIPHANY_HOME}/tools/host/include \
    -L${EPIPHANY_HOME}/tools/host/lib_le-hal ...
```

Basic mode of operation

As described in an earlier chapter, the standard mode of operation of the eHAL API is working in eCore workgroups. A workgroup is a rectangular mesh of eCore nodes that are allocated for performing a computational task. It is possible to load the group with identical copies of the same program (SPMD style), or load subgroups, or even single cores with different programs. It is the user's responsibility to make sure that tasks are not allocated to a previously allocated group cores.

External (shared) memory architecture

The host application can communicate with the Epiphany device by either accessing the eCore's private memory space, or by using shared buffers in the device external memory.

In a platform which implements such shared memory (for example, a bulk of DRAM accessible by the host via system bus or other connection, and by the Epiphany via the eLinks), there may be a different mapping of the physical address space of this memory, as seen from the host side and from the Epiphany side. For example, the Parallella platform is configured by default with 32MB of DRAM used as device memory. The physical address of this memory segment is $0 \times 1 = 000000 \div 0 \times 1 \text{fffffff}$. However, to overcome some system limitations, this range is aliased to address $0 \times 8 = 000000 \div 0 \times 8 \text{fffffff}$, as seen from the Epiphany side. For example, when a buffer of 8KB is allocated at offset 64KB on that segment, the host sees this buffer as occupying addresses $0 \times 1 = 010000 \div 0 \times 1 = 012000$. For accessing the buffer from the Epiphany program, this range is aliased to $0 \times 8 = 010000 \div 0 \times 8 = 012000$.

The base addresses of the external shared memory space (the real and the aliased) are defined in the Hardware Description File (HDF) so the eHAL is aware of the difference. The aliased base address is also defined in the Epiphany program's Linker Description File (LDF).

Enumerated constants and macros

```
typedef enum {
    E_FALSE,
    E_TRUE,
} e_bool_t;
typedef enum {
    E_OK,
    E_ERR,
    E_WARN,
} e return stat t;
```

The following symbols are defined and can be used as addresses to access eCore and Epiphany system registers using the e_read() and e_write() API's:

```
// General Purpose Registers
// (see Epiphany Architecture Manual for details)
typedef enum
{
    E REG RO,
                 E REG R8,
                               E REG R16,
                                              E REG R24,
                 E REG R9,
    E REG R1,
                               E REG R17,
                                              E REG R25,
                 E REG R10,
                               E REG R18,
                                              E REG R26,
    E REG R2,
    E REG R3,
                 E REG R11,
                               E REG R19,
                                              E REG R27,
    E REG R4,
                 E REG R12,
                               E REG R20,
                                              E REG R28,
                 E REG R13,
                               E REG R21,
                                              E REG R29,
    E REG R5,
    E REG R6,
                 E REG R14,
                               E REG R22,
                                              E REG R30,
    E REG R7,
                 E REG R15,
                               E REG R23,
                                              E REG R31,
                                              E REG R56,
    E REG R32,
                 E REG R40,
                               E REG R48,
    E REG R33,
                 E REG R41,
                               E REG R49,
                                              E REG R57,
    E REG R34,
                 E REG R42,
                               E REG R50,
                                              E REG R58,
    E REG R35,
                 E REG R43,
                               E REG R51,
                                              E REG R59,
```

```
E REG R36, E REG R44, E REG R52,
                                                       E REG R60,
                  E_REG_R45, E_REG_R53, E_REG_R61,
E_REG_R46, E_REG_R54, E_REG_R62,
    E_REG_R37, E_REG_R45,
     E REG R38,
     E REG R39, E REG R47, E REG R55,
                                                      E REG R63,
} e gp reg id t;
// eCore Special Registers
typedef enum
{
     // Control Registers
     E REG CONFIG,
                                    E REG IRET,
    E_REG_STATUS,
E_REG_FSTATUS,
                                    E REG IMASK,
                                 E REG ILAT,
     E REG PC,
                                    E REG ILATST,
                                   E_REG_ILATCL,
    E_REG_DEBUGSTATUS,
E_REG_DEBUGCMD,
                                  E REG IPEND,
     E REG LC,
     E REG LS,
     E REG LE,
   E_REG_DMA0CONFIG,E_REG_DMA1CONFIG,E_REG_DMA0STRIDE,E_REG_DMA1STRIDE,E_REG_DMA0COUNT,E_REG_DMA1COUNT,E_REG_DMA0SRCADDR,E_REG_DMA1SRCADDR,E_REG_DMA0DSTADDR,E_REG_DMA1DSTADDR,E_REG_DMA0AUTODMA0,E_REG_DMA1AUTODMA0,E_REG_DMA0AUTODMA1,E_REG_DMA1STATUS.
     // Event Timer Registers
     E REG CTIMERO,
                                      E REG CTIMER1,
     // Processor Control Registers
     E REG MEMPROTECT,
     E REG MESH CONFIG,
     E REG COREID,
     E REG CORE RESET,
} e_core_reg_id t;
// Chip Registers
// (see Epiphany Chip Datasheets for details)
typedef enum
{
     E REG IO LINK MODE CFG,
     E REG IO LINK TX CFG,
     E REG IO LINK RX CFG,
     E REG IO LINK DEBUG,
     E REG IO GPIO CFG,
     E REG IO FLAG CFG,
     E REG IO SYNC CFG,
     E REG IO HALT CFG,
```

```
E_REG_IO_RESET,
} e_chip_reg_id_t;

// Epiphany system registers
// (see Board manual for details)
typedef enum
{
    E_SYS_CONFIG,
    E_SYS_RESET,
    E_SYS_RESET,
    E_SYS_VERSION,
    E_SYS_FILTERL,
    E_SYS_FILTERL,
    E_SYS_FILTERC,
} e_sys_reg_id_t
```

14.2 Platform Configuration Functions

14.2.1 Overview

These functions are used to initialize and prepare the Epiphany system for working with the Host application. It also enables the query and retrieval of platform information.

Functions definition summary

```
int e_init(char *hdf);
int e_get_platform_info(e_platform_t *platform);
int e_finalize();
```

14.2.2 e_init()

Synopsis

```
#include ``e-hal.h"
int e init(char *hdf);
```

Description

This function initializes the HAL data structures, and establishes a connection to the Epiphany platform. The platform parameters are read form a Hardware Description File (HDF), whose path is given at the function argument.

If the hdf parameter is a NULL pointer, then the file location is read from the EPIPHANY_HDF environment variable. This variable is normally set on your system startup file (~/.bashrc in Linux), and reflects the structure of the underlying Epiphany platform. For example:

EPIPHANY HDF="\${EPIPHANY HOME}/bsps/parallella/parallella.xml"

If the EPIPHANY_HDF variable is not set, then the function will try to locate the platform.hdf file located in the current BSP directory.

Return value

If successful, the function returns E_OK. On a failure it returns E_ERR.

Note: At the time of the release, the XML parser was not yet fully integrated into the driver. Instead of an XML description file, the library now uses a simplified (flat) text file listing the platform components. Please use the provided files or create your own accordingly:

EPIPHANY_HDF="\${EPIPHANY_HOME}/bsps/parallella/parallella.hdf"

14.2.3 e_get_platform_info()

Synopsis

```
#include ``e-hal.h"
int e_get_platform_info(e_platform_t *platform);
```

Description

The Epiphany platform information is stored internally in an e_platform_t type object. It contains the data on the various chips, external memory segments and geometry comprising the system. Some of this data can be retrieved through this function.

Return value

If successful, the function returns E_OK. On a failure it returns E_ERR.

Note: The data that is currently made available through this function is:	
char *version	- platform version string
unsigned row, col	- coordinates of effective chip area
unsigned rows, cols	- size of effective chip area
int num_chips	- number of Epiphany chips in platform
int num_emems	- number of external memory segments

If necessary for the application, the internal object can be accessed using this declaration: extern e_platform_t e_platform;

However, this practice should be normally avoided, and if used, absolutely no modification of the data is allowed, or the integrity of the driver system may be broken. Additionally, because the variable is currently exposed (the extern keyword is not really necessary), there should be no user-defined object of this name in the application!

14.2.4 e_finalize()

Synopsis

```
#include "e-hal.h"
int e_finalize();
```

Description

Use this function to finalize the connection with the Epiphany system. Some resources that were allocated in the e_{init} () call are released here.

Return value

14.3 Workgroup and External Memory Allocation Functions

14.3.1 Overview

These functions are used to assign and allocate the eCore workgroups and external memory buffers resources.

Functions definition summary

```
int e_open(e_epiphany_t *dev, unsigned row, unsigned col,
    unsigned rows, unsigned cols);
int e_close(e_epiphany_t *dev);
int e_alloc(e_mem_t *mbuf, off_t base, size_t size);
int e_free(e_mem_t *mbuf);
```

14.3.2 e_open()

Synopsis

Description

This function defines an eCore workgroup. The workgroup is defined in terms of the coordintaes relative to the platform's effective chip area. The arguments row and col define the place of the group's origin eCore. The origin is set relative to the Epiphany platform's origin, defined in the e_init() call. The arguments rows and cols give the group's size, defining the work rectangle. A work group can be as amall as a single core or as large as the whole available effective chip area. The core group data is saved in the provided e_epiphany_t type object dev.

Subsequent accesses to the core group (e.g., for read and write of data) are done using a reference to the dev object.

Return value

14.3.3 e_close()

Synopsis

```
#include "e-hal.h"
int e_close(e_epiphany_t *dev);
```

Description

The function closes the eCore workgroup. The resources allocated by the e_{open} () call are released here. Use this function before re-allocating an eCore to a new workgroup.

Return value

14.3.4 e_alloc()

Synopsis

```
#include ``e-hal.h"
int e_alloc(e_mem_t *mbuf, off_t base, size_t size);
```

Description

This function defines a buffer in external memory. The buffer is defined in terms of the relative from the beginning of the external memory segment, defined in the $e_{init}()$ call. The argument base defines the offset, starting at 0. The argument and size gives the buffer's size. The external memory buffer data is saved in the provided e_{mem} t type object mbuf.

Subsequent accesses to the buffer (e.g., for read and write of data) are done using a reference to the mbuf object.

Return value

14.3.5 e_free()

Synopsis

#include "e-hal.h"
int e_free(e_mem_t *mbuf);

Description

The resources allocated by the $e_alloc()$ call are released here. Use this function before reallocating an external memory space to a new buffer.

Return value

14.4 Data Transfer Functions

14.4.1 Overview

These functions are used to read and write data from and to Epiphany eCore workgroups and external memory buffers.

Functions definition summary

ssize_t e_read(void *dev, unsigned row, unsigned col, off_t from_addr, void *buf, size_t size); ssize_t e_write(void *dev, unsigned row, unsigned col, off_t to_addr, const void *buf, size_t size);

14.4.2 e_read()

Synopsis

Description

This function reads data of length size from a workgroup core or an external memory buffer to the local byte buffer buf. The argument dev specifies the target from which to read the data. It can be of either types e_epiphany_t or e_mem_t.

If an object of type e_epiphany_t is given, then the row and col arguments specify the relative target eCore coordinates in the workgroup.

If an object of type e_mem_t is given, then the row and col arguments are ignored.

In both cases, the from_addr parameter specifies the write offset relative to the buffer's start, or to the eCore's internal space.

To access system registers, the to_addr parameter can be one of the register symbols of the types e_gp_reg_id_t, e_core_reg_id_t, e_chip_reg_id_t, e_sys_reg_id_t.

Return value

If successful, the function returns the number of bytes read. On a failure it returns E_ERR.

14.4.3 e_write()

Synopsis

Description

This function writes data of length size from the local byte buffer buf to a workgroup core or an external memory buffer. The argument dev specifies the target on which to write the data. It can be of either types e_epiphany_t or e_mem_t.

If an object of type e_epiphany_t is given, then the row and col arguments specify the relative target eCore coordinates in the workgroup.

If an object of type e_mem_t is given, then the row and col arguments are ignored.

In both cases, the to_addr parameter specifies the write offset relative to the buffer's start, or to the eCore's internal space.

To access system registers, the to_addr parameter can be one of the register symbols of the types e_gp_reg_id_t, e_core_reg_id_t, e_chip_reg_id_t, e_sys_reg_id_t.

Return value

If successful, the function returns the number of bytes written. On a failure it returns E ERR.

14.5 System Control Functions

14.5.1 Overview

These functions provide some means to control different aspects of the system and a program execution.

Functions definition summary

```
int e_reset_system();
int e_reset_group(e_epiphany_t *dev);
int e_start(e_epiphany_t *dev, unsigned row, unsigned col);
int e_start_group(e_epiphany_t *dev);
int e_signal(e_epiphany_t *dev, unsigned row, unsigned col);
int e_halt(e_epiphany_t *dev, unsigned row, unsigned col);
int e_resume(e_epiphany_t *dev, unsigned row, unsigned col);
```

14.5.2 e_reset_system()

Synopsis

```
#include ``e-hal.h"
int e_reset_system();
```

Description

Use this function to perform a full hardware reset of the Epiphany platform, including the Epiphany chips and the FPGA glue logic.

Special care must be taken when using this function in a multiprocessing environment not to disrupt working tasks, possibly launched by other applications.

Return value

14.5.3 e_reset_group()

Synopsis

```
#include ``e-hal.h"
int e_reset_group(e_epiphany_t *dev);
```

Description

Use this function to perform a soft reset of a workgroup.

Special care must be taken when using this function, as resetting the eCore when memory transactions, that were generated with a core read instruction from the global memory space (either LDR instruction or an instruction fetch from outside of the core) are not concluded can bring the system to an undefined state.

Return value

If successful, the function returns E_OK.

14.5.4 e_start()

Synopsis

```
#include ``e-hal.h"
int e_start(e_epiphany_t *dev, unsigned row, unsigned col);
```

Description

This function writes the SYNC signal to the workgroup core's ILAT register. It causes the core to jump to the IVT entry #0. Normally, this will be used after loading a program on the core.

The row and col parameters specify the target eCore coordinates, relative to the workgroup given by the dev argument.

Return value

14.5.5 e_start_group()

Synopsis

```
#include ``e-hal.h"
int e_start_group(e_epiphany_t *dev);
```

Description

This function writes the SYNC signal to the workgroup cores' ILAT registers. It causes the workgroup cores to jump to their IVT entry #0. Normally, this will be used after loading a program on the core.

Return value

14.5.6 e_signal()

Synopsis

```
#include ``e-hal.h"
int e_signal(e_epiphany_t *dev, unsigned row, unsigned col);
```

Description

This function writes the USER_INT (soft interrupt) signal to the workgroup core's ILAT register. It causes the core to jump to the IVT entry #9.

The row and col parameters specify the target eCore coordinates, relative to the workgroup given by the dev argument.

Return value

14.5.7 e_halt()

Synopsis

```
#include ``e-hal.h"
int e_halt(e_epiphany_t *dev, unsigned row, unsigned col);
```

Description

This function halts the workgroup core's program execution. It may be useful for debug purposes.

The row and col parameters specify the target eCore coordinates, relative to the workgroup specified by the dev argument.

Return value

14.5.8 e_resume()

Synopsis

```
#include ``e-hal.h"
int e_resume(e_epiphany_t *dev, unsigned row, unsigned col);
```

Description

This function resumes a workgroup core's program execution that was previously stopped with a call to $e_halt()$.

The row and col parameters specify the target eCore coordinates, relative to the workgroup specified by the dev argument.

Return value

14.6 Program Load Functions

14.6.1 Overview

These loader functions load an Epiphany program on an eCore or an eCore workgroup in a SPMD manner. Optionally, the loaded programs can be started immediately after loading the group.

Functions definition summary

14.6.2 e_load()

Synopsis

Description

This function loads an Epiphany program onto a workgroup core. The executable string specifies the path to the program's image. The target core workgroup is specified by the dev argument. The target core is specified by the row and col coordinates, relative to the workgroup.

Optionally, a loaded program can be started immediately after loading, according to the start parameter. When the start parameter is e_true, the program is launched after load. If it is e_false, the program is not launched.

Program load should be performed only when the core is in an idle or halt state. A safe way to achieve this is to use the e_reset_system() or e_reset_core() API's before the load.

Return value

If successful, the function returns E_OK. On a failure it returns E_ERR.

Note: Currently, the eHAL supports loading executable images in the form of SREC file format. Use the e-objcopy utility to generate an SREC image from the binary ELF executable, as described in chapters 6 and 9 of this book.

14.6.3 e_load_group()

Synopsis

```
#include ``e-hal.h"
```

Description

This function loads an Epiphany program onto a subgroup of a workgroup. The executable string specifies the path to the program's image. The target workgroup is specified by the dev argument. The target cores subgroup for loading the image is specified by the row and col coordinates, relative to the workgroup origin. The rows and cols parameters specify the size of the subgroups. All cores in the subgroup are loaded with the same program image.

Optionally, the loaded programs can be started immediately after loading on all cores in the subgroup, according to the start parameter. When the start parameter is e_true, the programs are launched after load. If it is e false, the programs are not launched.

Program load should be performed only when the core is in an idle or halt state. A safe way to achieve this is to use the e reset system() or e reset core() API's before the load.

Return value

If successful, the function returns E_OK . On a failure it returns E_ERR . Some non-fatal erroneous image content generates an E_WARN return value. The SREC parser ignores the errors and continues the program load.

Note: Currently, the eHAL supports loading executable images in the form of SREC file format. Use the e-objcopy utility to generate an SREC image from the binary ELF executable, as described in chapters 6 and 9 of this book.

14.7 Utility Functions

14.7.1 Overview

These is a set of utility functions, provided for easing some Host application programming tasks.

Functions definition summary

e_loader_diag_t e_set_loader_verbosity(e_loader_diag_t verbose);
14.7.2 e_get_num_from_coords()

Synopsis

Description

Convert a workgroup's eCore coordinates to a core number. The workgroup is defined by the dev argument. The core numbering is done in a "raster scan" manner, starting at the groups origin as core #0 and continuing row-wise. Thus, the number of the first core in the second row equals to the group's cols parameter, and the last core in the third row equals to $(3 \cdot cols - 1)$. The last core in the group is numbered (rows·cols-1).

Return value

The function returns the selected core's number.

14.7.3 e_get_coords_from_num()

Synopsis

Description

Convert a workgroup's eCore number to core's coordinates, relative to the group origin. The workgroup is defined by the dev argument. The core numbering is done in a raster scan manner, starting at the groups origin as core #0 and continuing column-wise. Thus, the (row, col) coordinates of the core #0 are (0,0), core #cols coordinates are (1,0), and core #(3·cols-1) coordinates are (2,cols-1). The last core in the group, numbered (rows·cols-1), has coordinates (rows-1,cols-1).

Return value

The function returns the selected core's coordinates.

14.7.4 e_is_addr_on_chip()

Synopsis

```
#include ``e-hal.h"
e_bool_t e_is_addr_on_chip(void *addr);
```

Description

This function checks whether a global, 32-bit address, given by argument addr, is within a physical Epiphany chip's space.

Return value

The function returns <code>e_true</code> if an address is on a chip and <code>e_false</code> otherwise.

14.7.5 e_is_addr_on_group()

Synopsis

```
#include ``e-hal.h"
e_bool_t e_is_addr_on_group(e_epiphany_t *dev, void *addr);
```

Description

This function checks whether a global, 32-bit address, given by argument addr, is within a core workgroup's space. The workgroup is specified by the dev argument.

Return value

The function returns e_true if an address is on a workgroup and e_false otherwise.

14.7.6 e_set_host_verbosity()

Synopsis

```
#include "e-hal.h"
e_hal_diag_t e_set_host_verbosity(e_hal_diag_t verbose);
```

Description

This function sets the verbosity level of the eHAL function calls. The levels defined from H_D0 to H_D4 . Level H_D0 means no diagnostics are emitted, and any higher level designates more detailed diagnostics. This function is meant for diagnostics and debug purposes.

Return value

The function returns the old diagnostics level value.

14.7.7 e_set_loader_verbosity()

Synopsis

#include ``e-hal.h"
e_loader_diag_t e_set_loader_verbosity(e_loader_diag_t verbose);

Description

This function sets the verbosity level of the program loader function calls, on top of the other eHAL calls diagnostics. The levels defined from L_DO to L_D4 . Level L_DO means no diagnostics are emitted, and any higher level designates more detailed diagnostics. This function is meant for diagnostics and debug purposes.

Return value

The function returns the old diagnostics level value.

Appendix A: Application Binary Interface (EABI)

A.1 Overview

This chapter is intended for library developers and users who develop custom assembly routines that can be called from the Epiphany C-compiler. The Epiphany ABI (EABI) is an agreement between developers that ensures interoperability between different libraries. The EABI defines a common procedure call standard and restrictions on data types and alignment. Some of the details defined by the EABI include:

- How the program (caller) should set up the machine state before calling a procedure.
- How the called procedure (callee) should preserve program state across the call.
- The right of the called procedure to alter the program state of its caller.

Conformance to this standard requires that:

- At all times, stack limits and basic stack alignment are observed.
- The routines of publicly visible interface conform to the procedure call standard.
- The data elements of publicly visible interface conform to the data layout rules. Data elements include: parameters to routines named in interfaces, static data, and all data addressed by pointer values across interfaces.

A.2.1 Arithmetic Data Types

Table A.1 shows the fundamental data types supported by the Epiphany architecture. Memory can be considered as an array of bytes, with each byte separately addressable by the software. The memory layout accepted is little-endian data. The least significant bit of an object is always bit 0.

C/C++ Type	Machine Type	Size (Bytes)	Restriction
char	Signed byte	1	
unsigned char	Unsigned byte	1	
signed char	Signed byte	1	
signed short	Signed half-word	2	Must be half-word aligned
			in memory
unsigned short	Unsigned half-word	2	Must be half-word aligned
			in memory
signed int	Signed word	4	Must be word aligned in
			memory
unsigned int	Unsigned word	4	Must be word aligned in
			memory
signed long	Signed word	4	Must be word aligned in
			memory
unsigned long	Unsigned word	4	Must be word aligned in
			memory
signed long long	Signed double word	8	Must be double-word
			aligned in memory
unsigned long long	Unsigned double word	8	Must be double-word
			aligned in memory
float	IEEE754 Single-	4	Must be word aligned in
	Precision Floating Point		memory
double	IEEE754 Double-	8	Must be double-word
	Precision Floating Point		aligned in memory

Table 14.1: Arithmetic Data Types

A.2.2 Composite Types

In additional to the fundamental data types described previously, the Epiphany supports composite types, which are a collection of one or more fundamental data types that can be processed as a single entity during procedure calls. Each one of the composite types may contain composite types and/or fundamental data types as members.

Aggregates

An aggregate is a type with members that are laid out sequentially in memory. The alignment of the aggregate shall be the alignment of its most aligned component. The size of the aggregate shall be the smallest multiple of its alignment that is sufficient to hold all of its members when they are laid out according to these rules.

Unions

A union is a composite type, where each of the members has the same address. The alignment of a union shall be the alignment of its most-aligned component. The size of a union shall be the smallest multiple of its alignment that is sufficient to hold its largest member. Structures and unions are laid out according to the fundamental data types of which they are composed. All members are laid out in declaration order.

Arrays

An array is a repeated sequence of some other type (its base type). The alignment of an array shall be the alignment of its base type. The size of an array shall be the size of the base type multiplied by the number of elements in the array.

A.3 Procedure Call Standard

A.3.1 Overview

This chapter defines the protocol for defining and using procedures in a functional language. It includes rules for stack management, register usage, and argument passing.

A.3.2 Register Usage

The Epiphany architecture includes 64 general word length purpose register. Table A.2 below shows the register usage convention in the EABI. The register usage convention acts as a contract to guarantee that a caller and callee function can work together with predictable results.

Name	Synonym	Role in the Procedure Call Standard	Saved By
RO	A1	Argument/result/scratch register #1	Caller saved
R1	A2	Argument/result/scratch register #2	Caller saved
R2	АЗ	Argument/result/scratch register #3	Caller saved
R3	A4	Argument/result/scratch register #4	Caller saved
R4	Vl	Register variable #1	Callee saved
R5	V2	Register variable #2	Callee saved
R6	V3	Register variable #3	Callee saved
R7	V4	Register variable #4	Callee saved
R8	V5	Register variable #5	Callee saved
R9	V6	Register variable #6	Callee saved
R10	V7	Register Variable #7	Callee saved
R11	V8/FP	Variable Register #8/Frame Pointer	Callee saved
R12	_	Intra-procedure call scratch register	Caller saved
R13	SP	Stack Pointer	N/A
R14	LR	Link Register	Callee saved
R15		General use	Callee saved
R16-R27		General use	Caller saved

Table 14.2: Register Usage and Procedure Call Standard

R28-R31	Reserved for constants	N/A
R32-R43	General use	Callee saved
R44-R63	General use	Caller saved

- The first four registers R0-R3 (A1-A4) are used to pass argument values into a subroutine and to return a result value from a function. They may also be used to hold intermediate values within a routine (but, in general, only between subroutine calls).
- Typically, the registers R4-R11, R14-R15, and R32-R43 are used to hold the values of a routine's local variables.

A subroutine must preserve the contents of the registers R4-R11, R14-R15, and R32-R43

A.3.3 Handling Large Data Types

Fundamental types larger than 32 bits may be passed as parameters to, or returned as the result of, function calls. A double-word sized type is passed in two consecutive registers (e.g., R0 and R1, or R2 and R3).

A.3.4 Stack Management

The stack is a contiguous area of memory that may be used for storage of local variables and for passing additional arguments to subroutines when there are insufficient argument registers available. The stack implementation is full-descending, with the current extent of the stack held in the register SP (R13). The stack will, in general, have both a base and a limit though in practice an application may not be able to determine the value of either.

The stack may have a fixed size or be dynamically extendable (by adjusting the stack-limit downwards). The rules for maintenance of the stack are divided into two parts: a set of constraints that must be observed at all times, and an additional constraint that must be observed at a public interface. At all times the following basic constraints must hold:

• Stack-limit < SP <= stack-base. The stack pointer must lie within the extent of the stack.

- (SP mod 4)=0. The stack pointer must at all times be aligned to a word boundary (where SP is the value of register R13).
- A process may only access (for reading or writing) the closed interval of the entire stack delimited by [SP, (stack-base – 1)].
- The stack frame must be double-word aligned.

A.3.5 Subroutine Calls

The Epiphany includes 'BL' and 'JALR' instructions for calling subroutines. These instructions transfer the sequentially next value of the program counter—the return address —into the link register (LR) and the destination address into the program counter (PC). The result is to transfer control to the destination address, passing the return address in LR as an additional parameter to the called subroutine. Control is returned to the instruction following the BL/JALR when the return address is loaded back into the PC using the JR/RTS instruction.

A.3.6 Procedure Result Return

The manner in which a result is returned from a procedure is determined by the type of the result. A data type that is smaller than 4 bytes is zero or sign-extended to a word and returned in r_0 .

A word-sized data type (e.g., int, float) is returned in r0.

A double-word sized data type (e.g., long long, double) is returned in r0 and r1.

- A Composite Type not larger than 4 bytes is returned in r0. The format is as if the result had been stored in memory at a word-aligned address and then loaded into r0 with an LDR instruction. Any bits in r0 that lie outside the bounds of the result have unspecified values.
- A Composite Type larger than 4 bytes, or whose size cannot be determined statically by both caller and callee, is stored in memory at an address passed as an extra argument when the function was called.

A.3.7 Parameter Passing

The base standard provides for passing arguments in core registers (r0-r3) and on the stack. For subroutines that take a small number of parameters, only registers are used, greatly reducing procedure call overhead.

Appendix B: Board Support Packages

B.1 Board Support Package Descriptor File

The Epiphany uses an XML format that allows the flexibility of defining custom boards so that the Epiphany SDK can be automatically configured to work correctly. Standard boards and evaluation kits officially supported by Adapteva are distributed with XML board support packages (BSP) pre-written.

The following example code shows the XML configuration file for the Epiphany Multicore Evaluation Kit (EMEK).

```
<?xml version="1.0"?>
<platform version="1" name="AAHM" lib="libftdi_target.so" libinitargs="">
   <chips>
      <chip version="3" id="(32,36)" rows="4" cols="4" host_base="0x12000000"
                                                         core memory size="0x8000">
          <ioregs col="2" row="2"/>
      </chip>
      <chip version="5" id="(32,32)" rows="1" cols="1" host_base="0x12000000"</pre>
                                                         core memory size="0x8000" />
   </chips>
   <external_memory>
      <bank name="EXTERNAL DRAM 0" start="0x80000000" size="0x01000000" />
      <bank name="EXTERNAL DRAM 1" start="0x81000000" size="0x01000000" />
      <bank name="EXTERNAL SRAM"
                                    start="0x920f0000" size="0x00010000" />
   </external memory>
</platform>
```

The following sections define the different tags used in the ESDK XML configuration format.

The <platform> Element

The <platform> tag will serve as the root tag for the document and has the following attributes:

name

This attribute provides a human-readable name for the platform being described by the document. An example value would be "AAHM" for the Epiphany Multicore Evaluation Kit. This name is used to acknowledge a successful startup sequence by the 'e-server'.

lib

The lib attribute defines the name of the library containing the software needed to access the platform from a Linux host. In the case of the EMEK, a lib might be "ftdilib_target".

libinitargs

This attribute defines a string that will be passed to the library's init_platform() function. The string is actually embedded in a structure containing other needed information, and a pointer to this structure is passed to init_platform(). For the EMEK, the string will be NULL, but other systems may require additional information provided by this string.

The <chips> Element

The <chips> tag will have the following sub-elements:

<chips>

This tag serves as a container for at least one <chip> tag. It has the following subelements:

<chip>

This tag defines a single chip within the platform. It has the following attributes: version

This required attribute defines the version number of the chip, and should be unique for each incarnation of the chip.

id

This attribute defines the chip's row and column id. The values specified here should match the YID and XID pin settings of the device, meaning it does not include the portions of the coordinates that are internal to the chip. In the case of a 16-core device, YID and XID are four bits each.

rows

This attribute defines the number of rows in the device.

cols

This attribute defines the number of columns in the device.

host_base

This attribute gives the library a base address that it may use for addressing the device's host. In the case of the AAHM on an S3 Devkit, it would be equal to 0x12000000. This is the beginning of an address range within the FPGA on the S3 Devkit containing control registers (such as reset) and an area of memory used as a readback destination. Use of this field is specific to the library.

core_memory_size

This attribute defines the amount of memory (in bytes) internal to each core in the device. If omitted, it defaults to 32K bytes.

The <chip> tag may optionally have the following sub-elements: <cores>

This tag defines an array of <core> tags. If this array is omitted, the parser will assume that all the cores within the device (as defined by the rows and cols attributes) are present.

<core>

The core tag can be used to explicitly identify the cores within the device. It has the following attribute:

id

This attribute identifies the local coordinates of the core within the chip. That is, the internal portion of the core's row and column coordinates.

<ioregs>

This subelement is used to identify the location of any I/O registers within the chip, such as link port control or GPIO registers. If it is omitted, the device is assumed to have no I/O registers. If present, it requires the following attributes: col

This attribute defines the column in which the north and south control registers lie. The north registers will reside in row 0, and the south registers will reside in the chip's maximum row number.

row

This attribute defines the row in which the east and west control registers lie. The east registers will reside in column 0, and the west registers will reside in the chip's maximum column number.

The <external_memory> Element

The <external memory> tag may have the following optional sub-elements:

```
<external memory>
```

This element defines an array of external memory banks. It requires at least one <bank> sub-element.

<bank>

This tag identifies one bank of external memory available to the chip. It has the following attributes, all of which are required.

name

This attribute names the memory bank, and could be used by a linker script code generator.

start

This attribute defines the starting address of the memory bank (as dereferenced by an Epiphany core).

size

This attribute defines the size (in bytes) of the memory bank.

Note: The current XML parser is implemented in C++. In order to keep the eHAL library C compatible when processing the HDF, we could not use this parser, and plan to replace it with a C implementation.

Until the replacement is integrated in, the eHAL does not support the XML file format. Instead, a simplified text file was defined. This file has the .hdf extension, and includes information similar to that of the XML HDF files. Here's what a sample file looks like:

<pre>// Platform descript. // ZedBoard/512MB/E1 PLATFORM_VERSION ESVS_BEGS_BASE</pre>	ion for the 6G3 0x00000300
NUM_CHIPS	1
CHIP	E16G301
CHIP_ROW	32
CHIP_COL	8
NUM_EXT_MEMS	1
EMEM	ext-DRAM
EMEM_BASE_ADDRESS	0x1e000000
EMEM_EPI_BASE	0x8e000000
EMEM_SIZE	0x02000000
EMEM_TYPE	RDWR

Structure Definition

The XML file will be parsed by the top-level code in whatever tool needs the information, and its data will be captured in a C-language structure. A pointer to this structure can then be passed to any of the tool's subcomponents (such as libftdi_target in the case of gdbserver). The structures required are defined below:

```
// Structure describing each chip in the system
typedef struct
                            // version of the chip
  char
         *version;
 unsigned yid;
                            // chip coordinates (YID[0:3] pins)
 unsigned xid;
                            // chip coordinates (XID[0:3] pins)
 unsigned ioreg_row;
                            // row within chip where I/O registers are located
 unsigned ioreg_col;
                            // column within chip where I/O registers are located
 unsigned num_rows;
                            // number of rows in the chip
                            // number of cols in the chip
 unsigned num cols;
         *host_base;
 void
                           // base address of host (for reset, readback, etc)
  size_t
          core memory size; // bytes of internal memory in each core
} chip_def_t;
// Structure describing each external memory segment available to the chips.
typedef struct
Ł
 char *name; // name of the memory segment (can be used in linker script)
 void *base; // base address of memory segment
  size_t size; // number of bytes in the memory segment
} mem_def_t;
// Structure containing the data parsed from the XML file and
// passed to a subordinate function.
typedef struct
  char
                          // name of the platform (i.e. "AAHM")
            *name;
                          // name of platform library (i.e. "libftdi target")
  char
            *lib;
            *libinitargs; // additional argument string passed to lib init fxn
  char
 unsigned
             num_chips
                          // number of elements in chips[] array
  chip_def_t *chips;
                          // array of chips[]
 unsigned
             num_banks; // number of elements in ext_mem[] array
 mem def t *ext mem;
                          // array of ext mem[]
} platform_definition_t;
```

Appendix C: Changes from Previous Revisions

Revision	Changes	
5.13.09.10	Updated e-read and e-write utilities options	
	Updated system register enumerations	
	Minor text correction	
5.13.07.09	Updated installation procedure	
	Updated tools documentation links	
	Added note on Eclipse	
	Added chapter on E-UTILS for e-reset, e-loader, e-read, e-write, e-hw-rev	
	Added chapter on the new Epiphany Programming Model	
	Updated the E-LIB chapter:	
	* Added description for the new workgroup config objects	
	* Revised enumeration type and symbol names	
	* Split register enumeration to functional groups and added _REG_	
	* Add some GP regs and a couple more system regs	
	* Modified the following functions:	
	Removed e_sysreg_read(),e_sysreg_write(), e_gid(), e_gie(), e_gie_restore(),	
	e_irq_disable(), e_irq_enable(), e_irq_raise(), e_irq_remote_raise(),	
	e_irq_lower(), e_irq_restore(), e_mutex_destroy(), e_coreid_from_address(),	
	e_address_from_coreid(), e_coreid_origin()	
	Added e_reg_read(), e_reg_write(), e_irq_attach(), e_irq_global_mask(),	
	e_irq_mask(), e_irq_set(), e_irq_clear(), e_ctimer_wait(), e_read(), e_write(),	
	e_dma_wait(), e_dma_set_desc(), e_barrier_init(), e_barrier(),	
	e_get_global_address()	
	Modified e_ctimer_set(), e_ctimer_stop(), e_dma_copy(), e_dma_start(),	
	e_mutex_init(), e_mutex_lock(), e_mutex_trylock(), e_mutex_unlock(),	
	e_is_oncore(), e_neighbor_id()	
	Updated the E-HAL chapter:	
	* Revised enumeration symbols	

	* Split register enumeration to functional groups and added _REG_	
	* Modified the System Control section:	
	Added e_start_group()	
	SWI now called USER_INT	
	e_halt() and e_resume() now implemented	
	Modified e_set_host_verbosity(), e_set_loader_verbosity()	
4.13.03.30		